
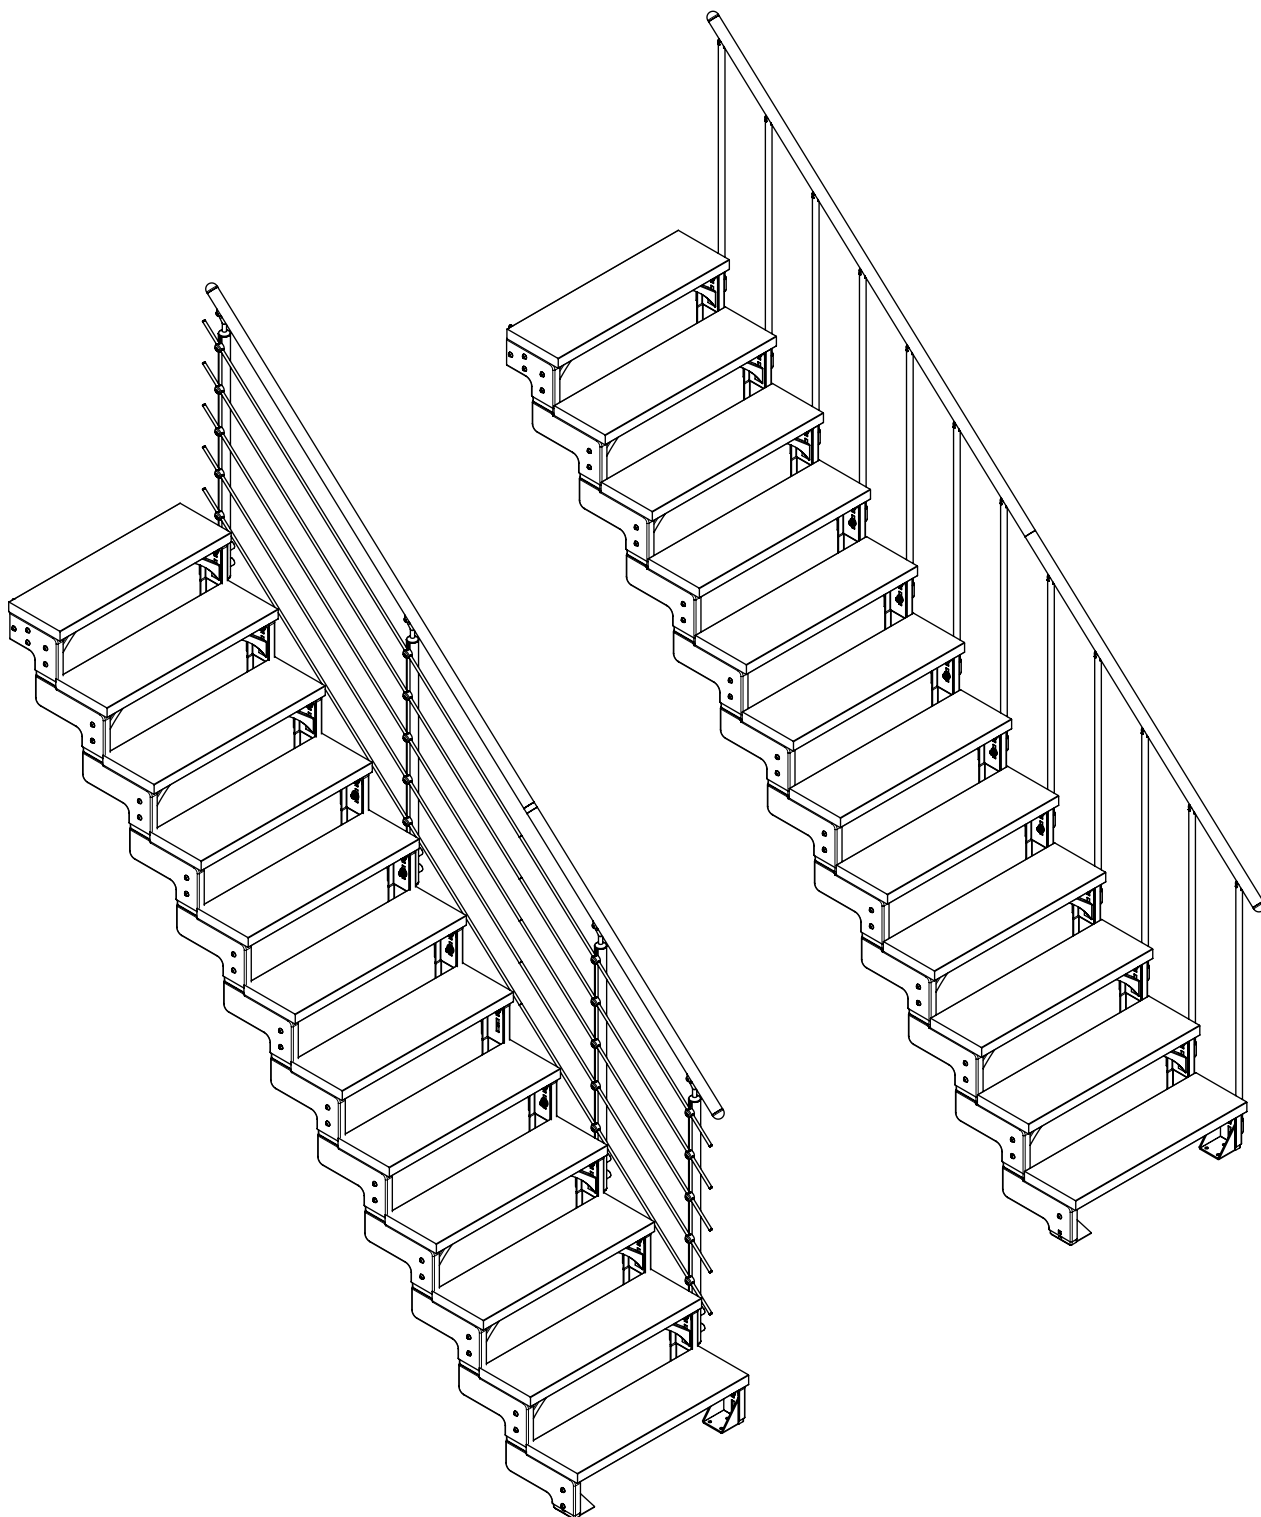
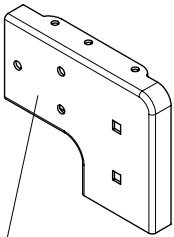
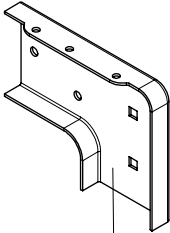
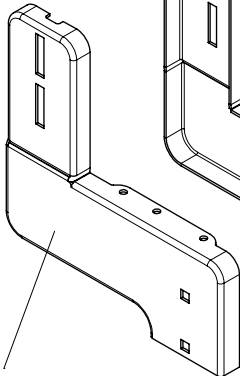
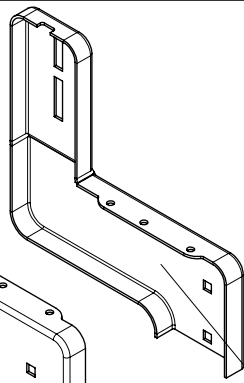
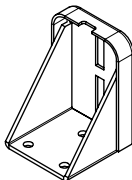




GARDENTOP


Trimax




Montageanleitung
Installation instruction













1068015			Starter-Set Start kit		
1 2  × 1 K1-41430  × 1 K1-41930			7 8  × 1 K1-41911  × 1 K1-41910		5  × 2 K2-41900
40  × 14 K3-02045 M10×25	41  × 2 K3-04110 Ø10	42  × 8 K3-04198 Ø10	43  × 14 K3-03051 M10	44  × 12 K3-08001 Ø12 x 60	45  × 12 K3-06070 Ø10 x 60
59  × 12 K3-06269 Ø6 x 35	63  × 4 K3-05022 M8 x 20	64  × 12 K3-04010 Ø10,5			

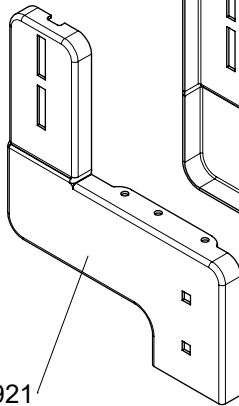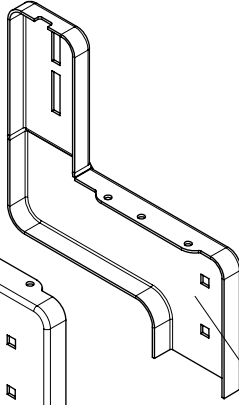
1068016			Ergänzungs-Set 1 step kit		
3 4  × 1 K1-41921  × 1 K1-41920			40  × 4 K3-02045 M10 x 25	42  × 4 K3-04198 Ø10	43  × 4 K3-03051 M10
			59  × 6 K3-06269 Ø6 x 35		

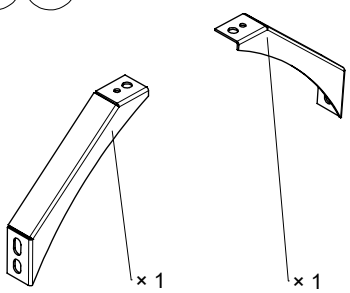1068020		Stufen-Winkel Step support 1 step			
 If more than 6 steps: Add 9 + 10 Wenn mehr als 6 Stufen: 9 + 10 hinzufügen	9 10  x1 K1-41060 x1 K1-41061 Max. 6 Satz sets		40  x 2 K3-02045 M10 x 25	43  x 2 K3-03051 M10	58  x 2 K3-02386 M8 x 40
			59  x 1 K3-06269 Ø6 x 35	61  x 2 K3-03047 M8	65  x 2 K3-04099 Ø10

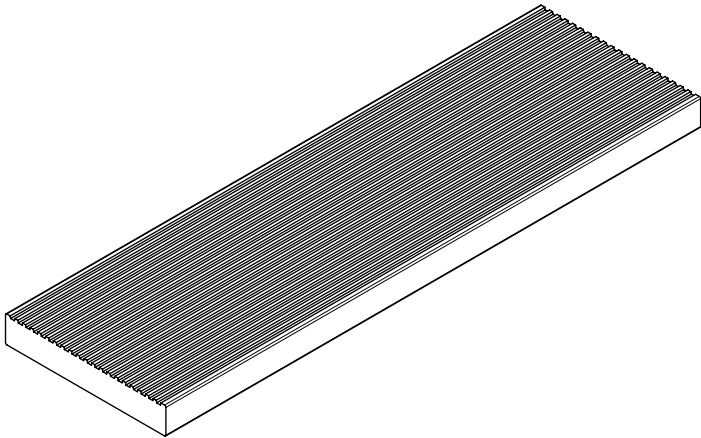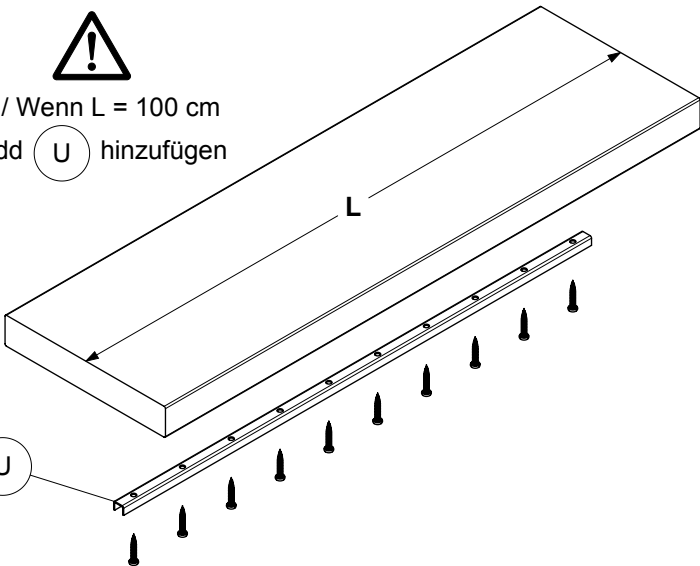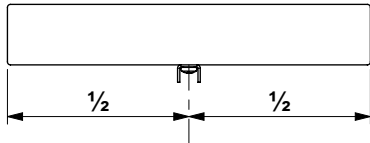		Trimax-Stufe Trimax step		80 cm / 100 cm	
11					59  × 6 K3-06269 Ø6×35 
 If / Wenn L = 100 cm add  hinzufügen  					

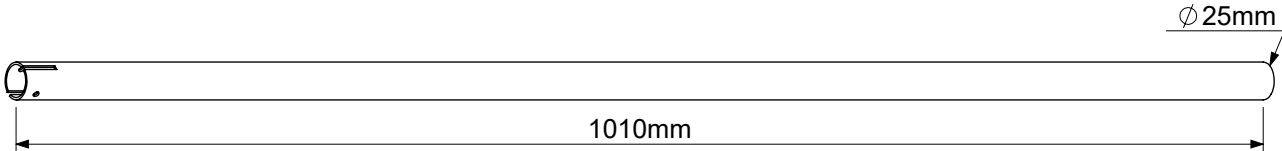
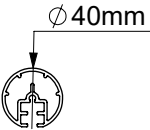
1068031		Steiggeländer für 6 Stufen Standard banister for 6 steps		
14  × 6 K2-41052	15  × 1 K1-01221	16  × 6 K1-02130	17  × 2 K2-04040	
18  × 6 K1-41056				
19  × 1 K1-01100				
46  × 6 K3-01034 M4 x 30	47  × 6 K3-03004 M4	48  × 12 K3-05006 M6 x 8	68  × 16 K3-05052 M5 x 16	

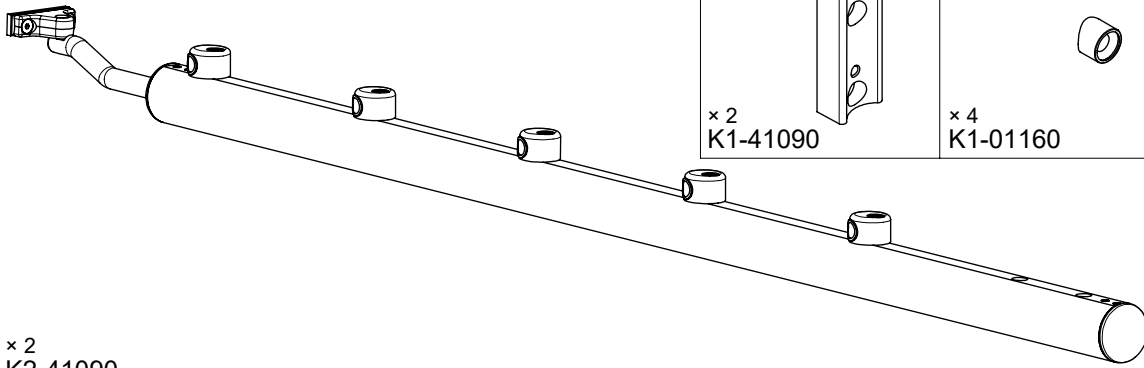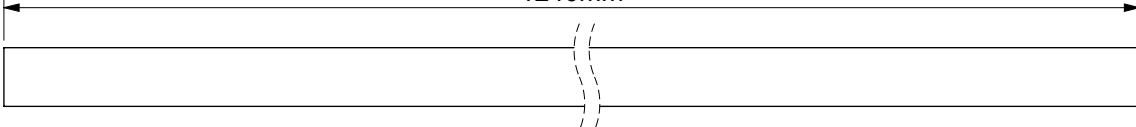


1068040		Steiggeländer PROVA Starter-Set für 4 Stufen PROVA banister start for 4 steps		
17  × 2 K2-04040	20  × 2 K2-41090		21  × 2 K1-41090	22  × 4 K1-01160
26  × 1 K1-01107	1240mm 			
27  × 5 K1-18060	1240mm 			
28  × 10 K1-01010	29  × 1 K2-14930	51  × 4 K3-02010 M10 x 70		



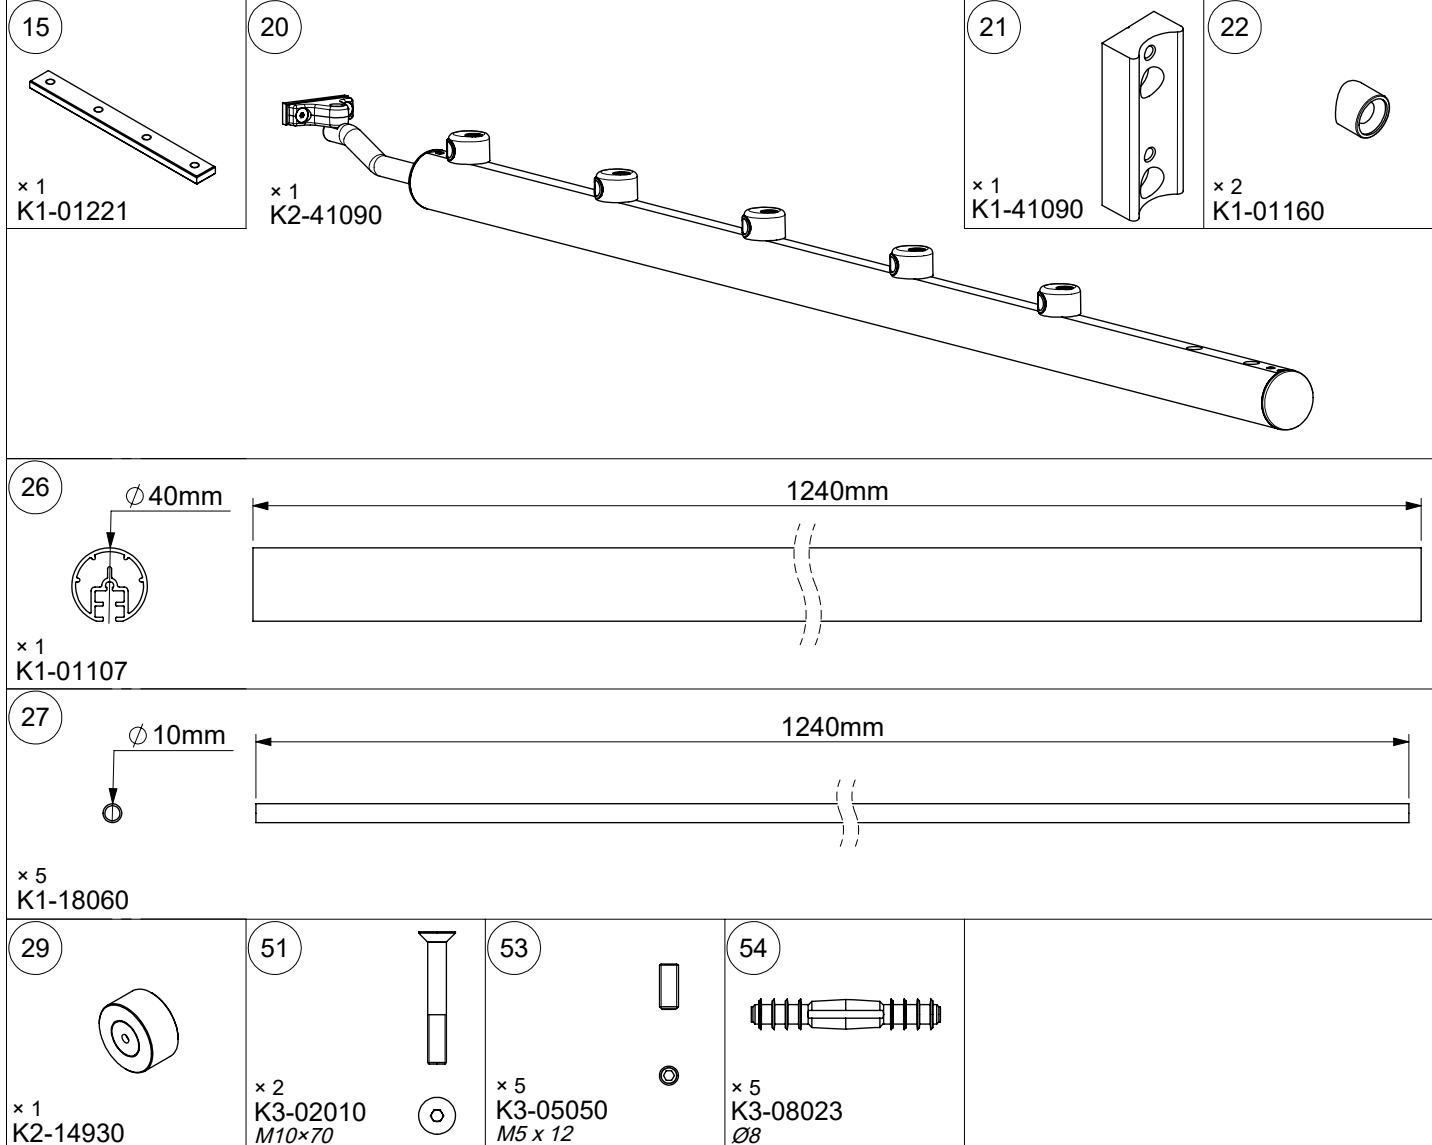
1068041**Steiggeländer PROVA Ergänzungs-Set für 4 Stufen**
PROVA banister extension for 4 steps





1068098		Unterstützung Support		OPTION	
24 	26  × 1 K1-41955	27  × 1 K1-41956	41  × 1 K3-04110 Ø10	43  × 1 K3-03051 M10	52  × 1 K3-02375 M10 x 75
	53  × 2 K3-05007 M5 x 5	54  × 1 K3-08002 Ø8 x 40	55  × 1 K3-06032 Ø6 x 60		

× 1
K1-41950

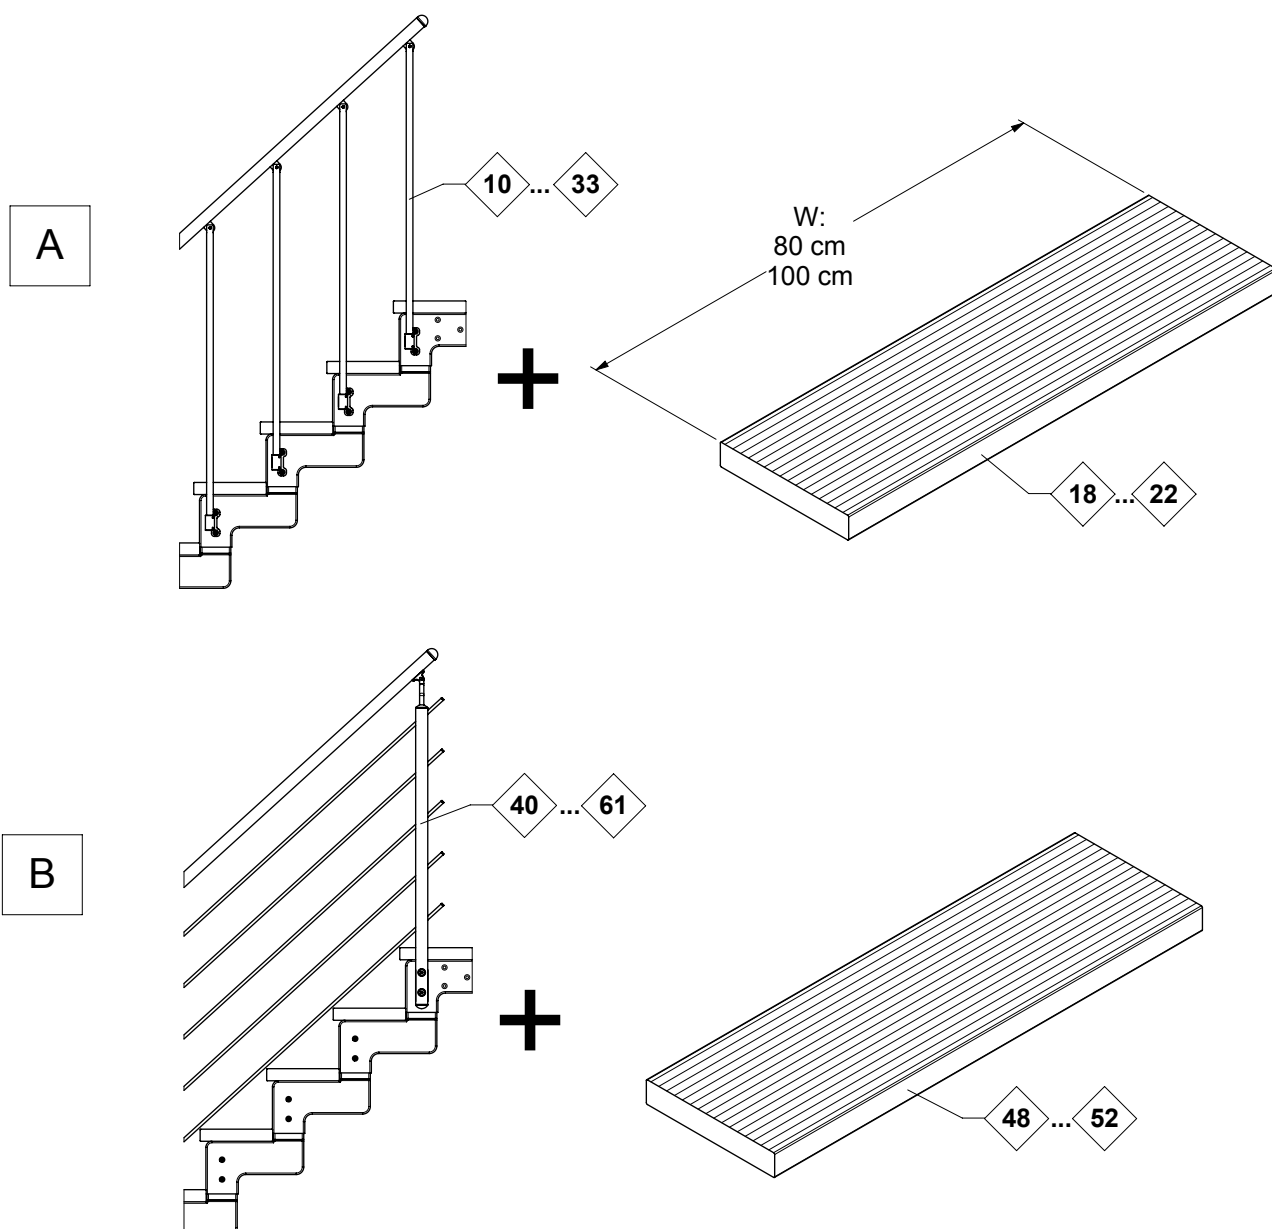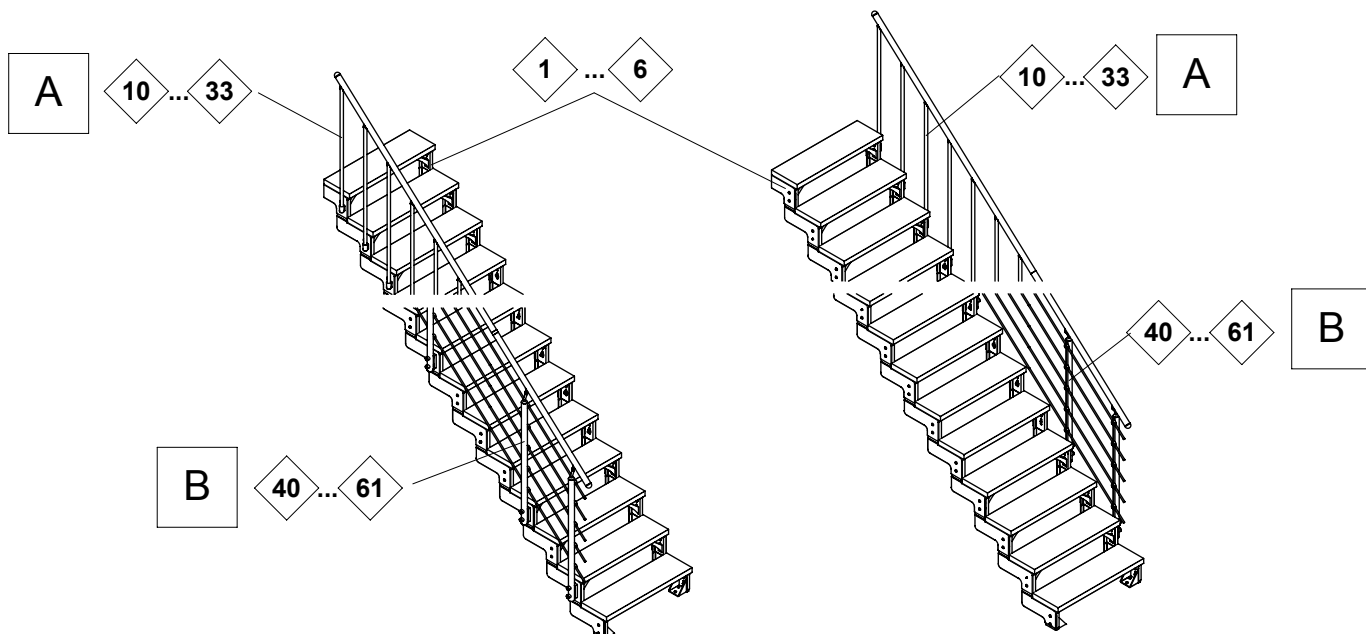

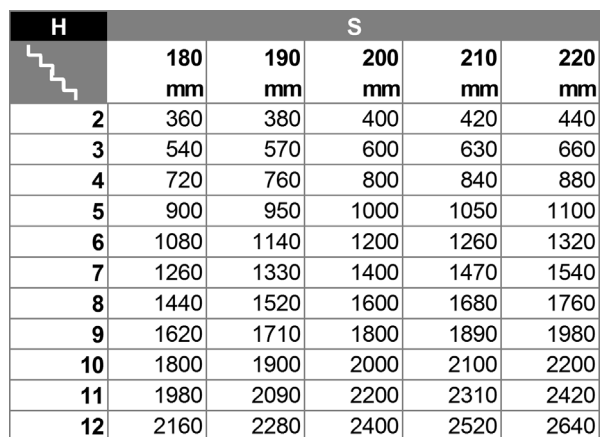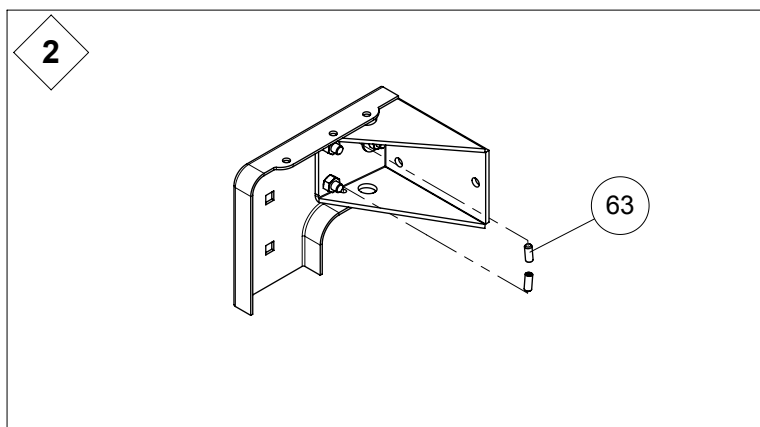
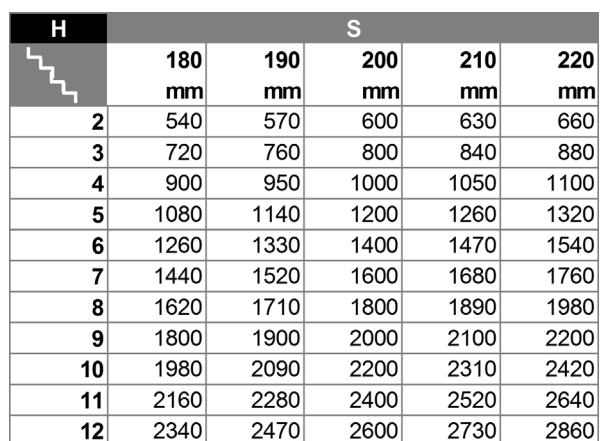


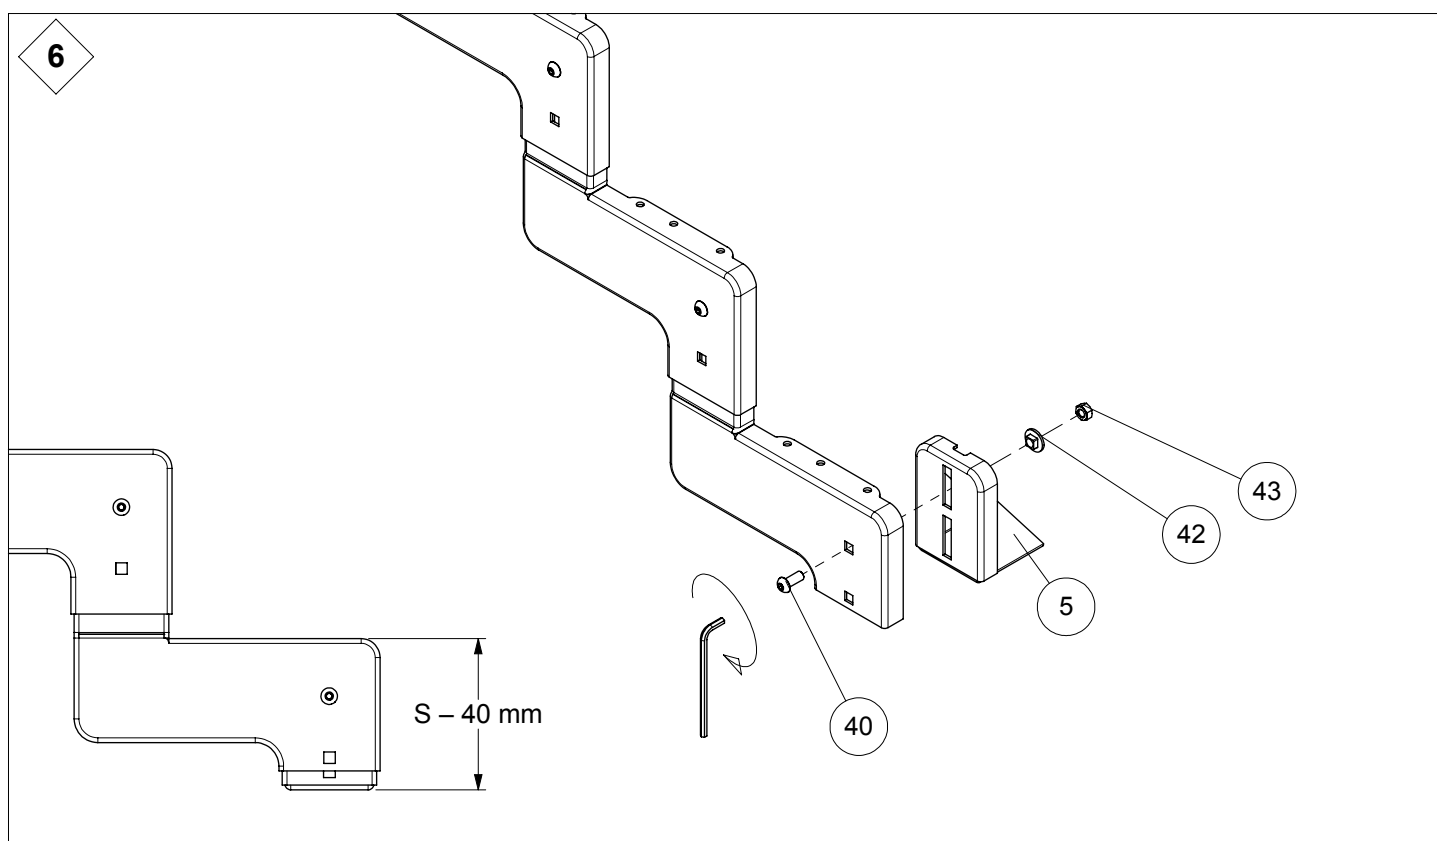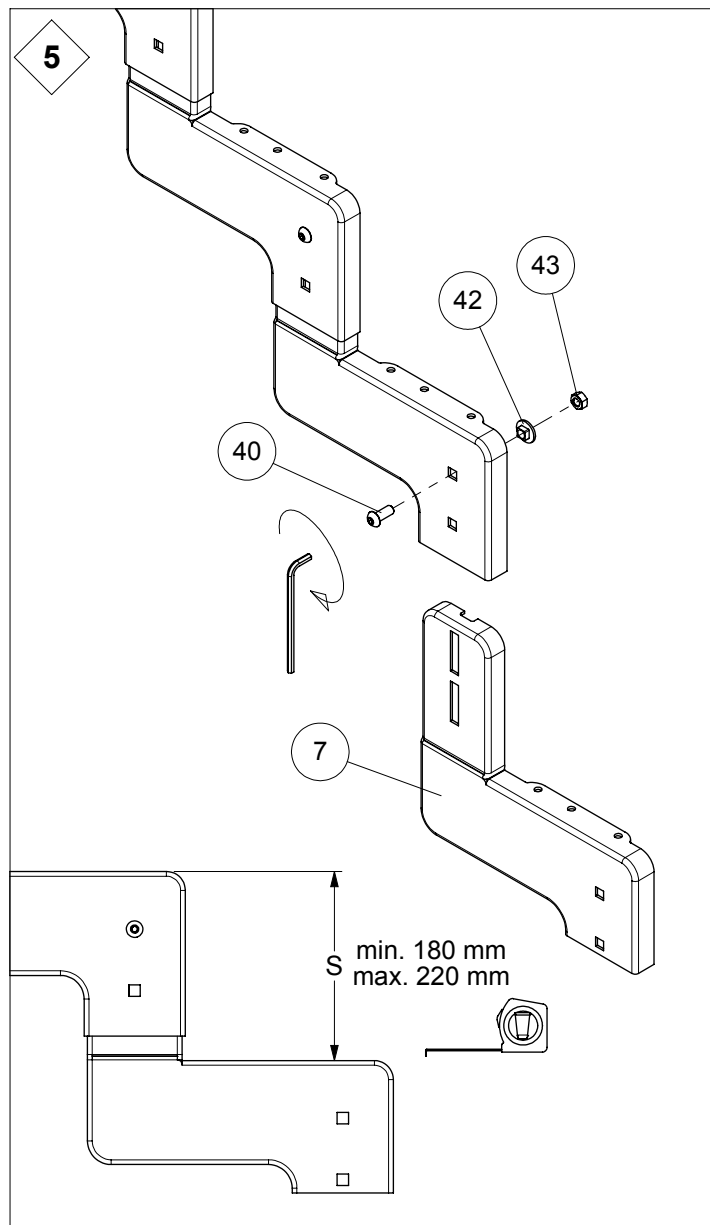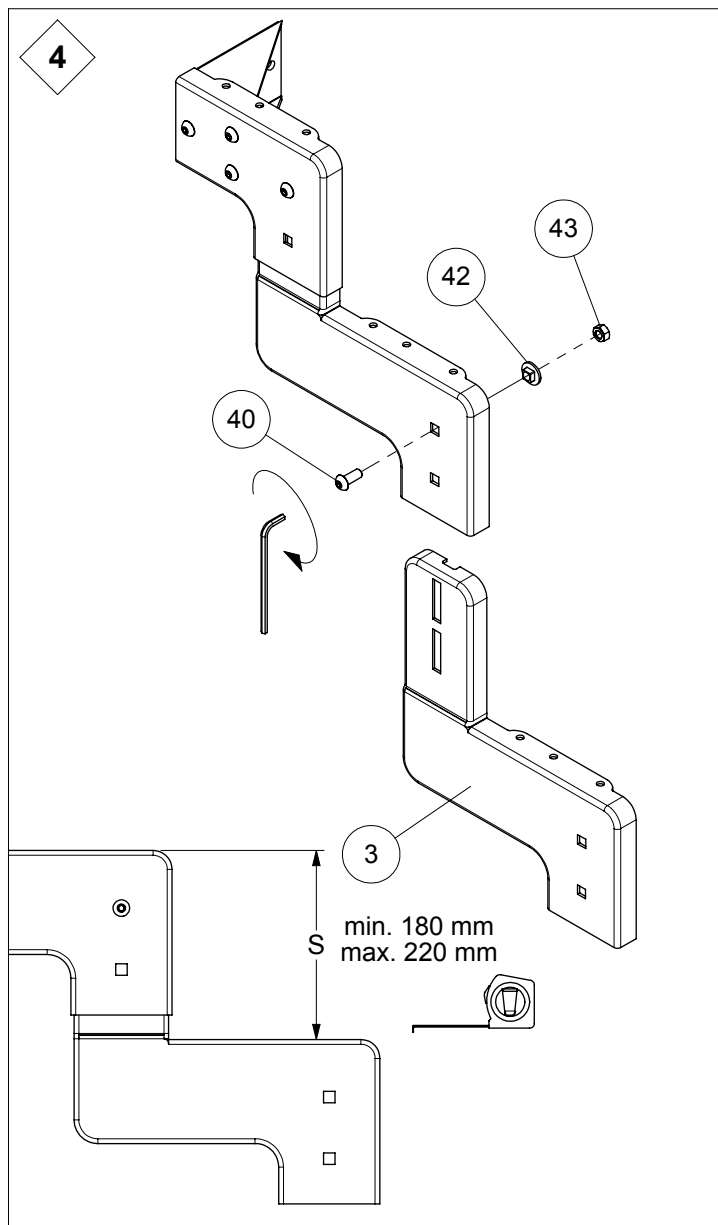

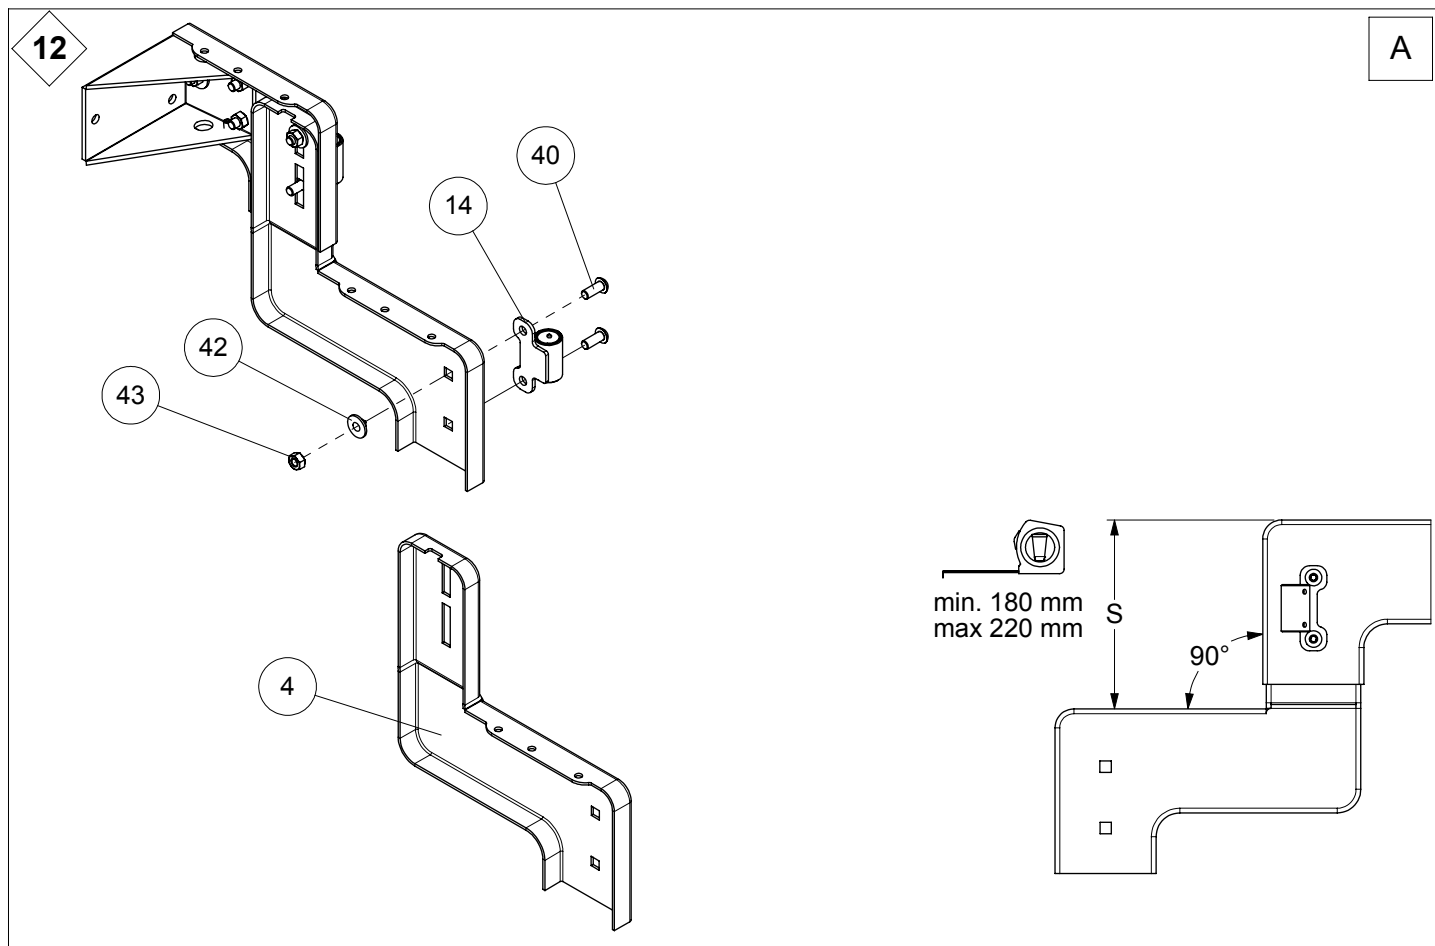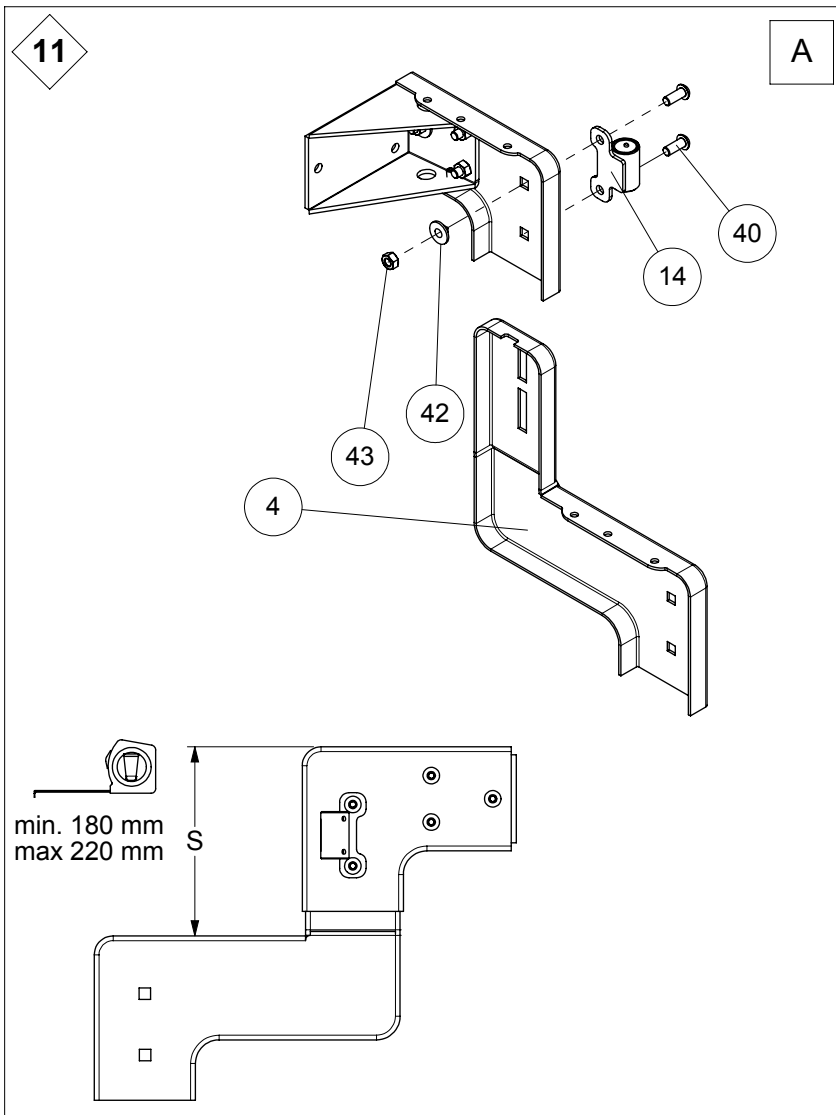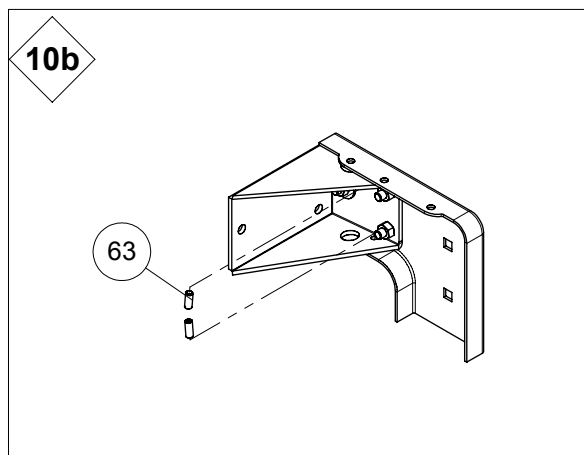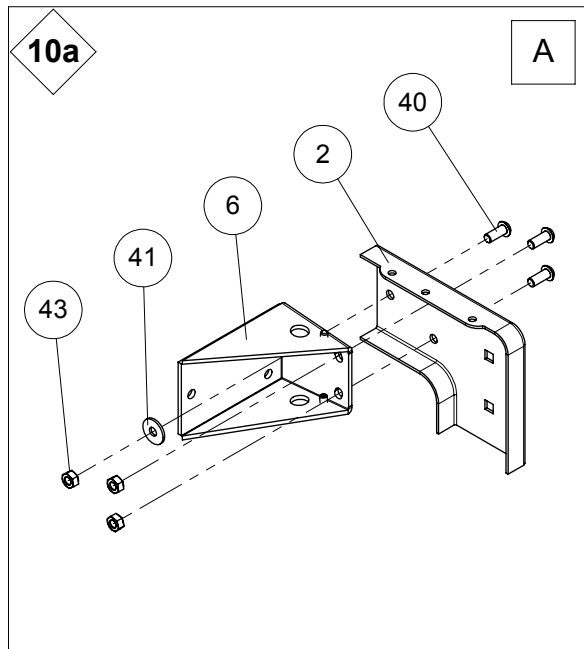



13

A

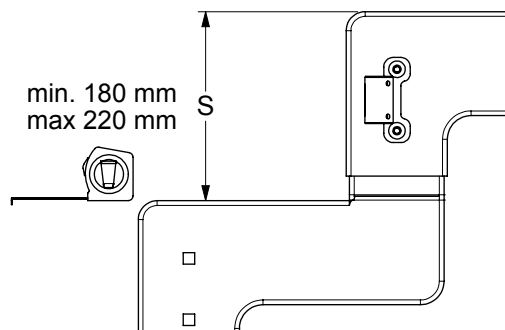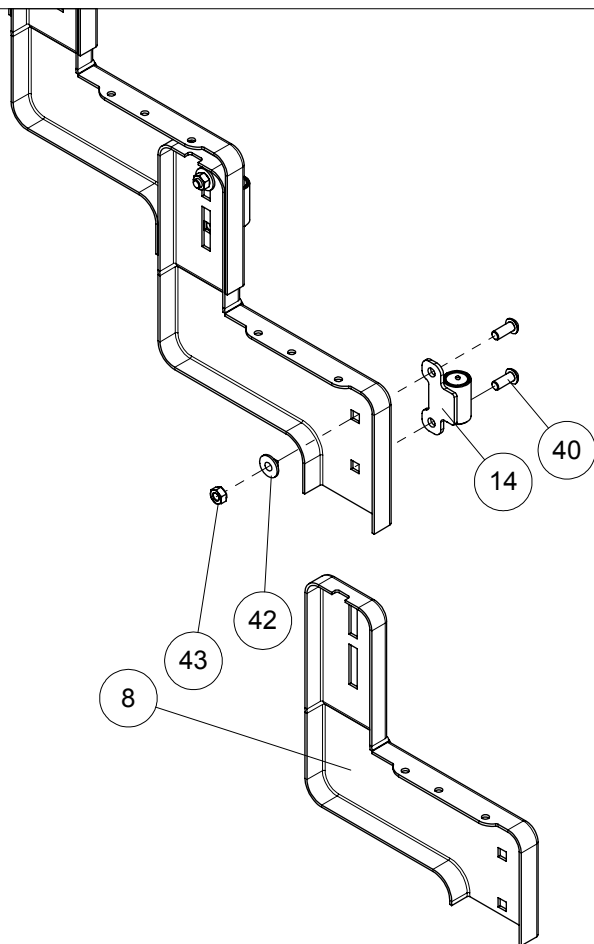



14


A

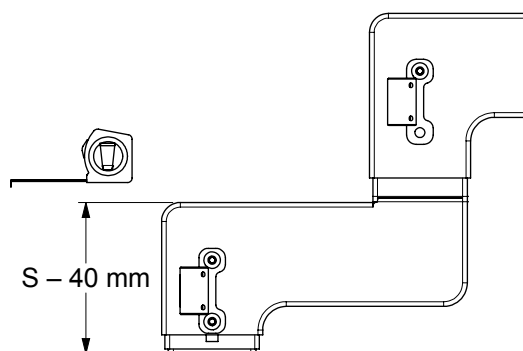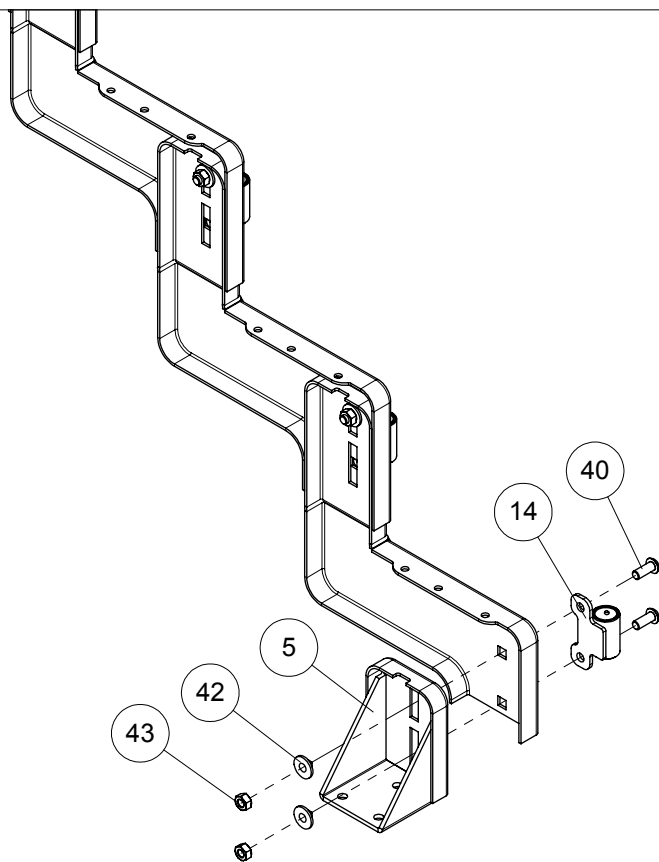


Stufe / Step	W
80 cm	803 mm
100 cm	1003 mm



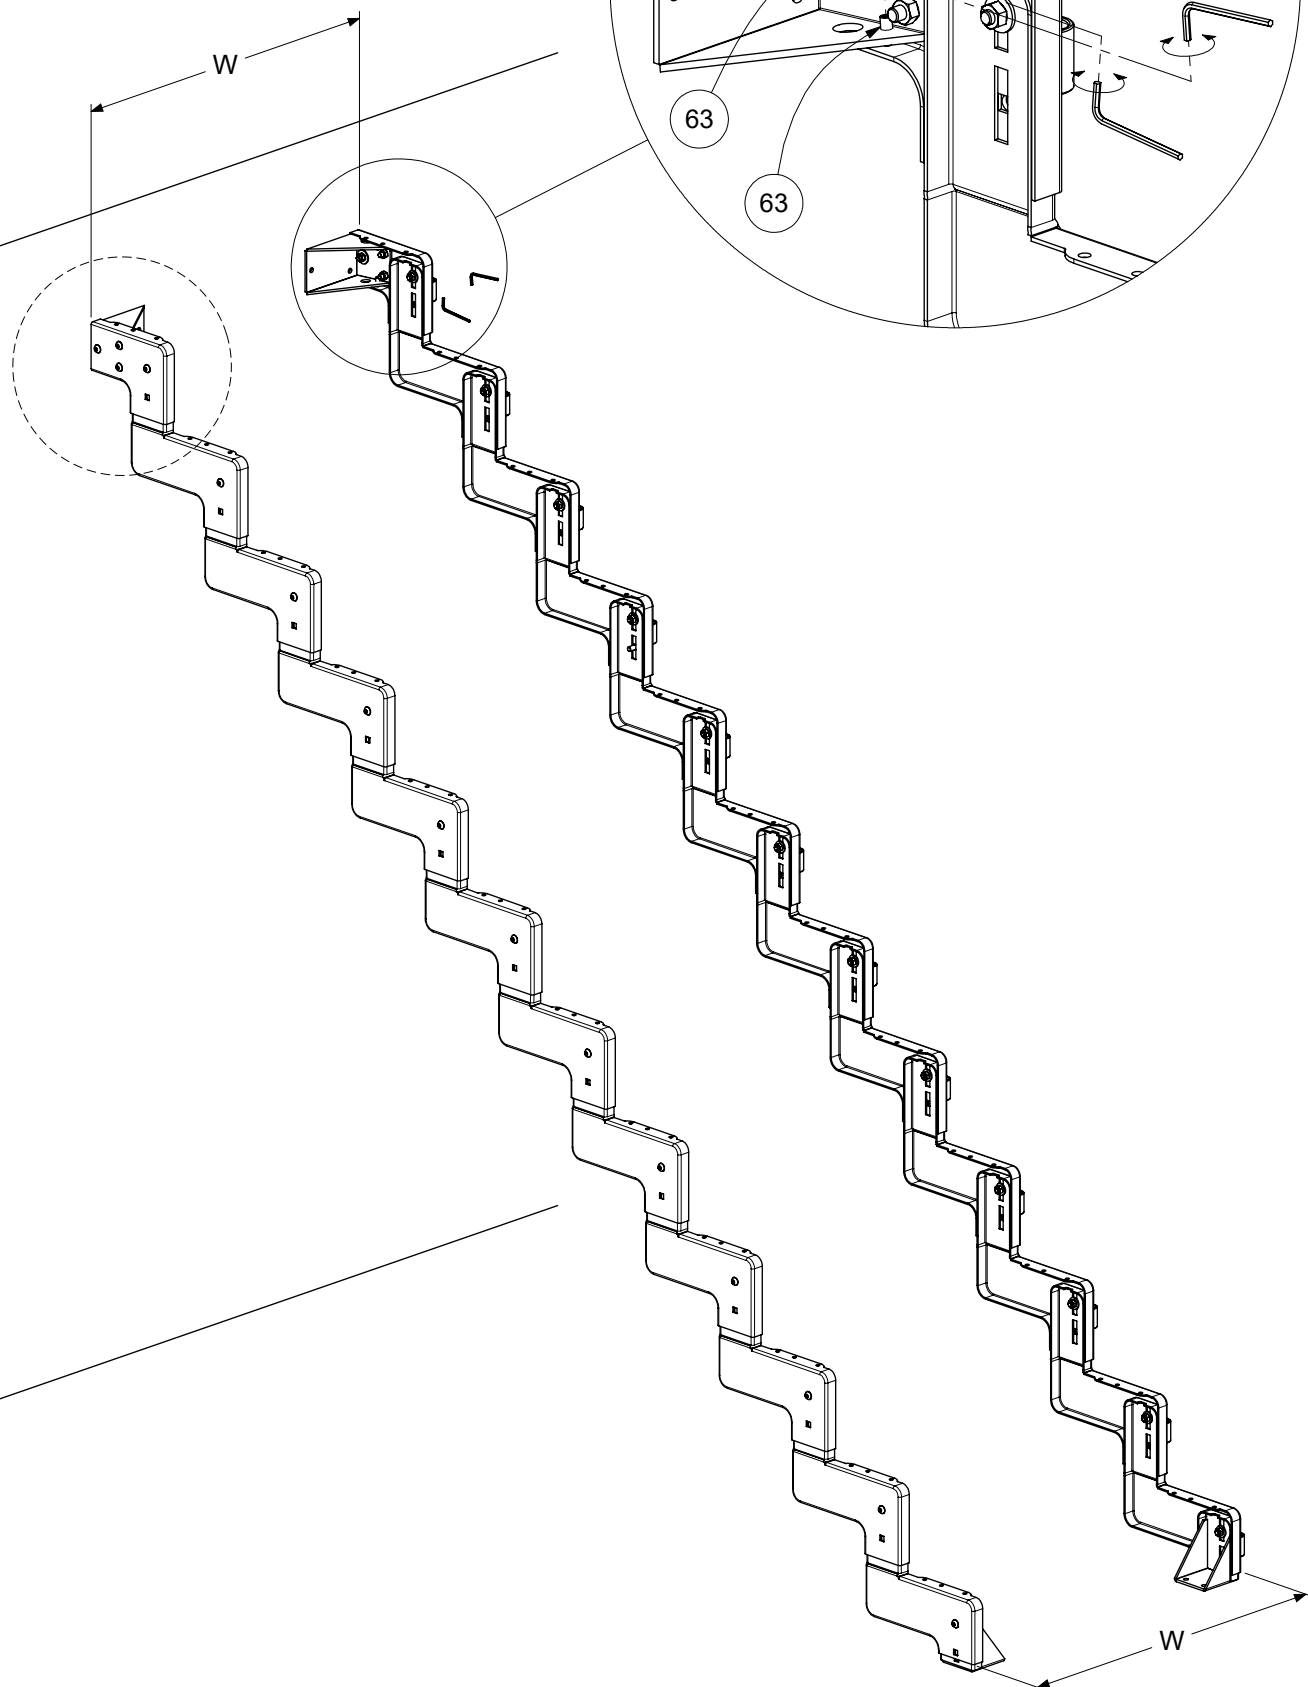


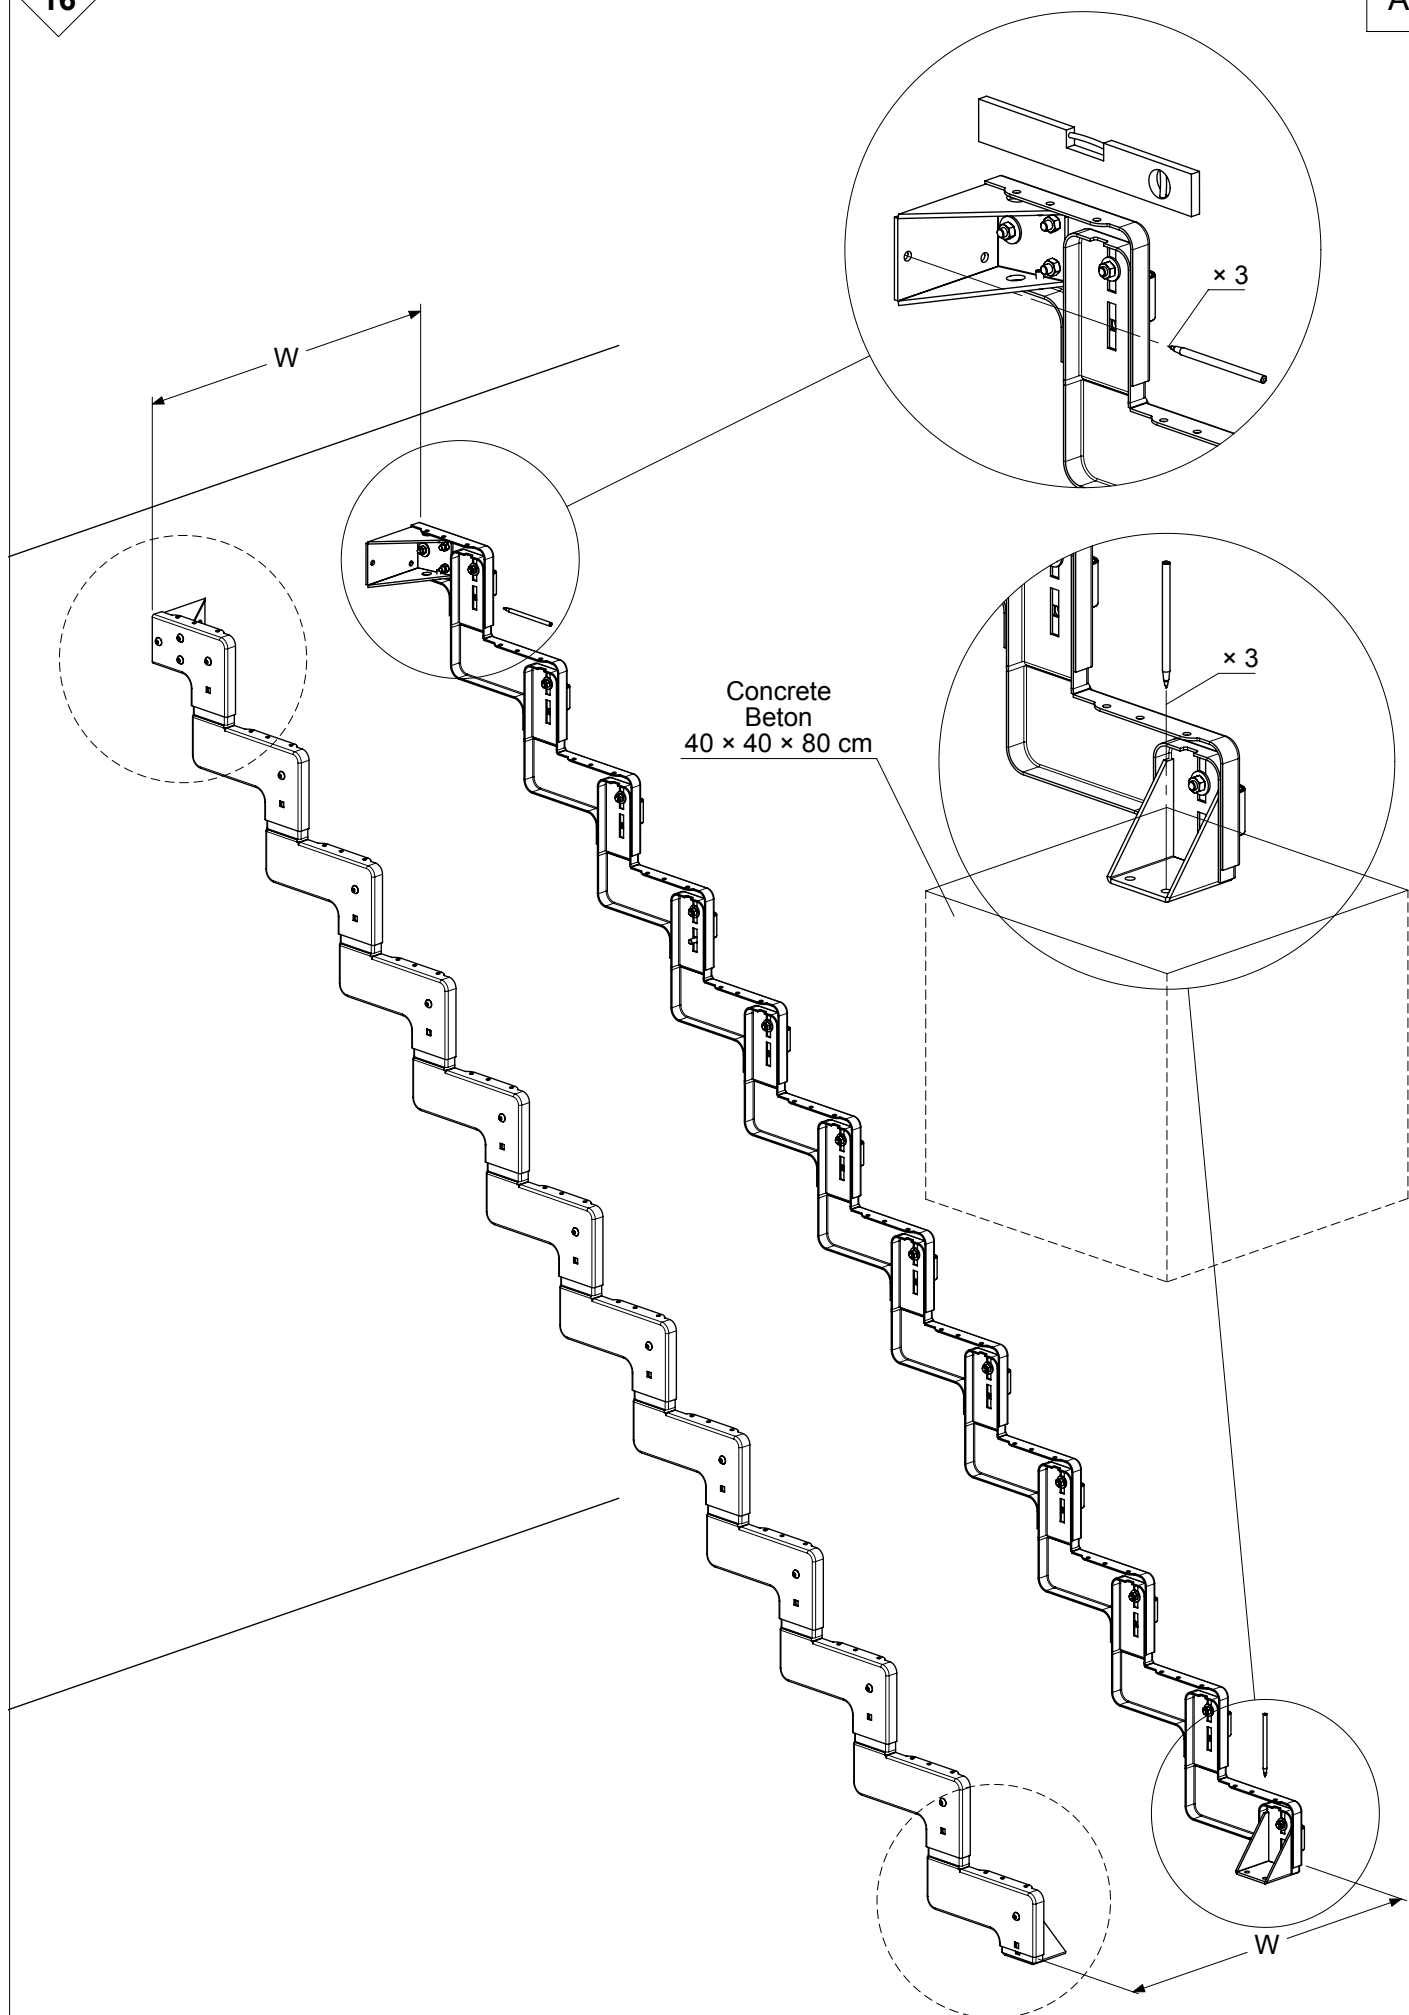

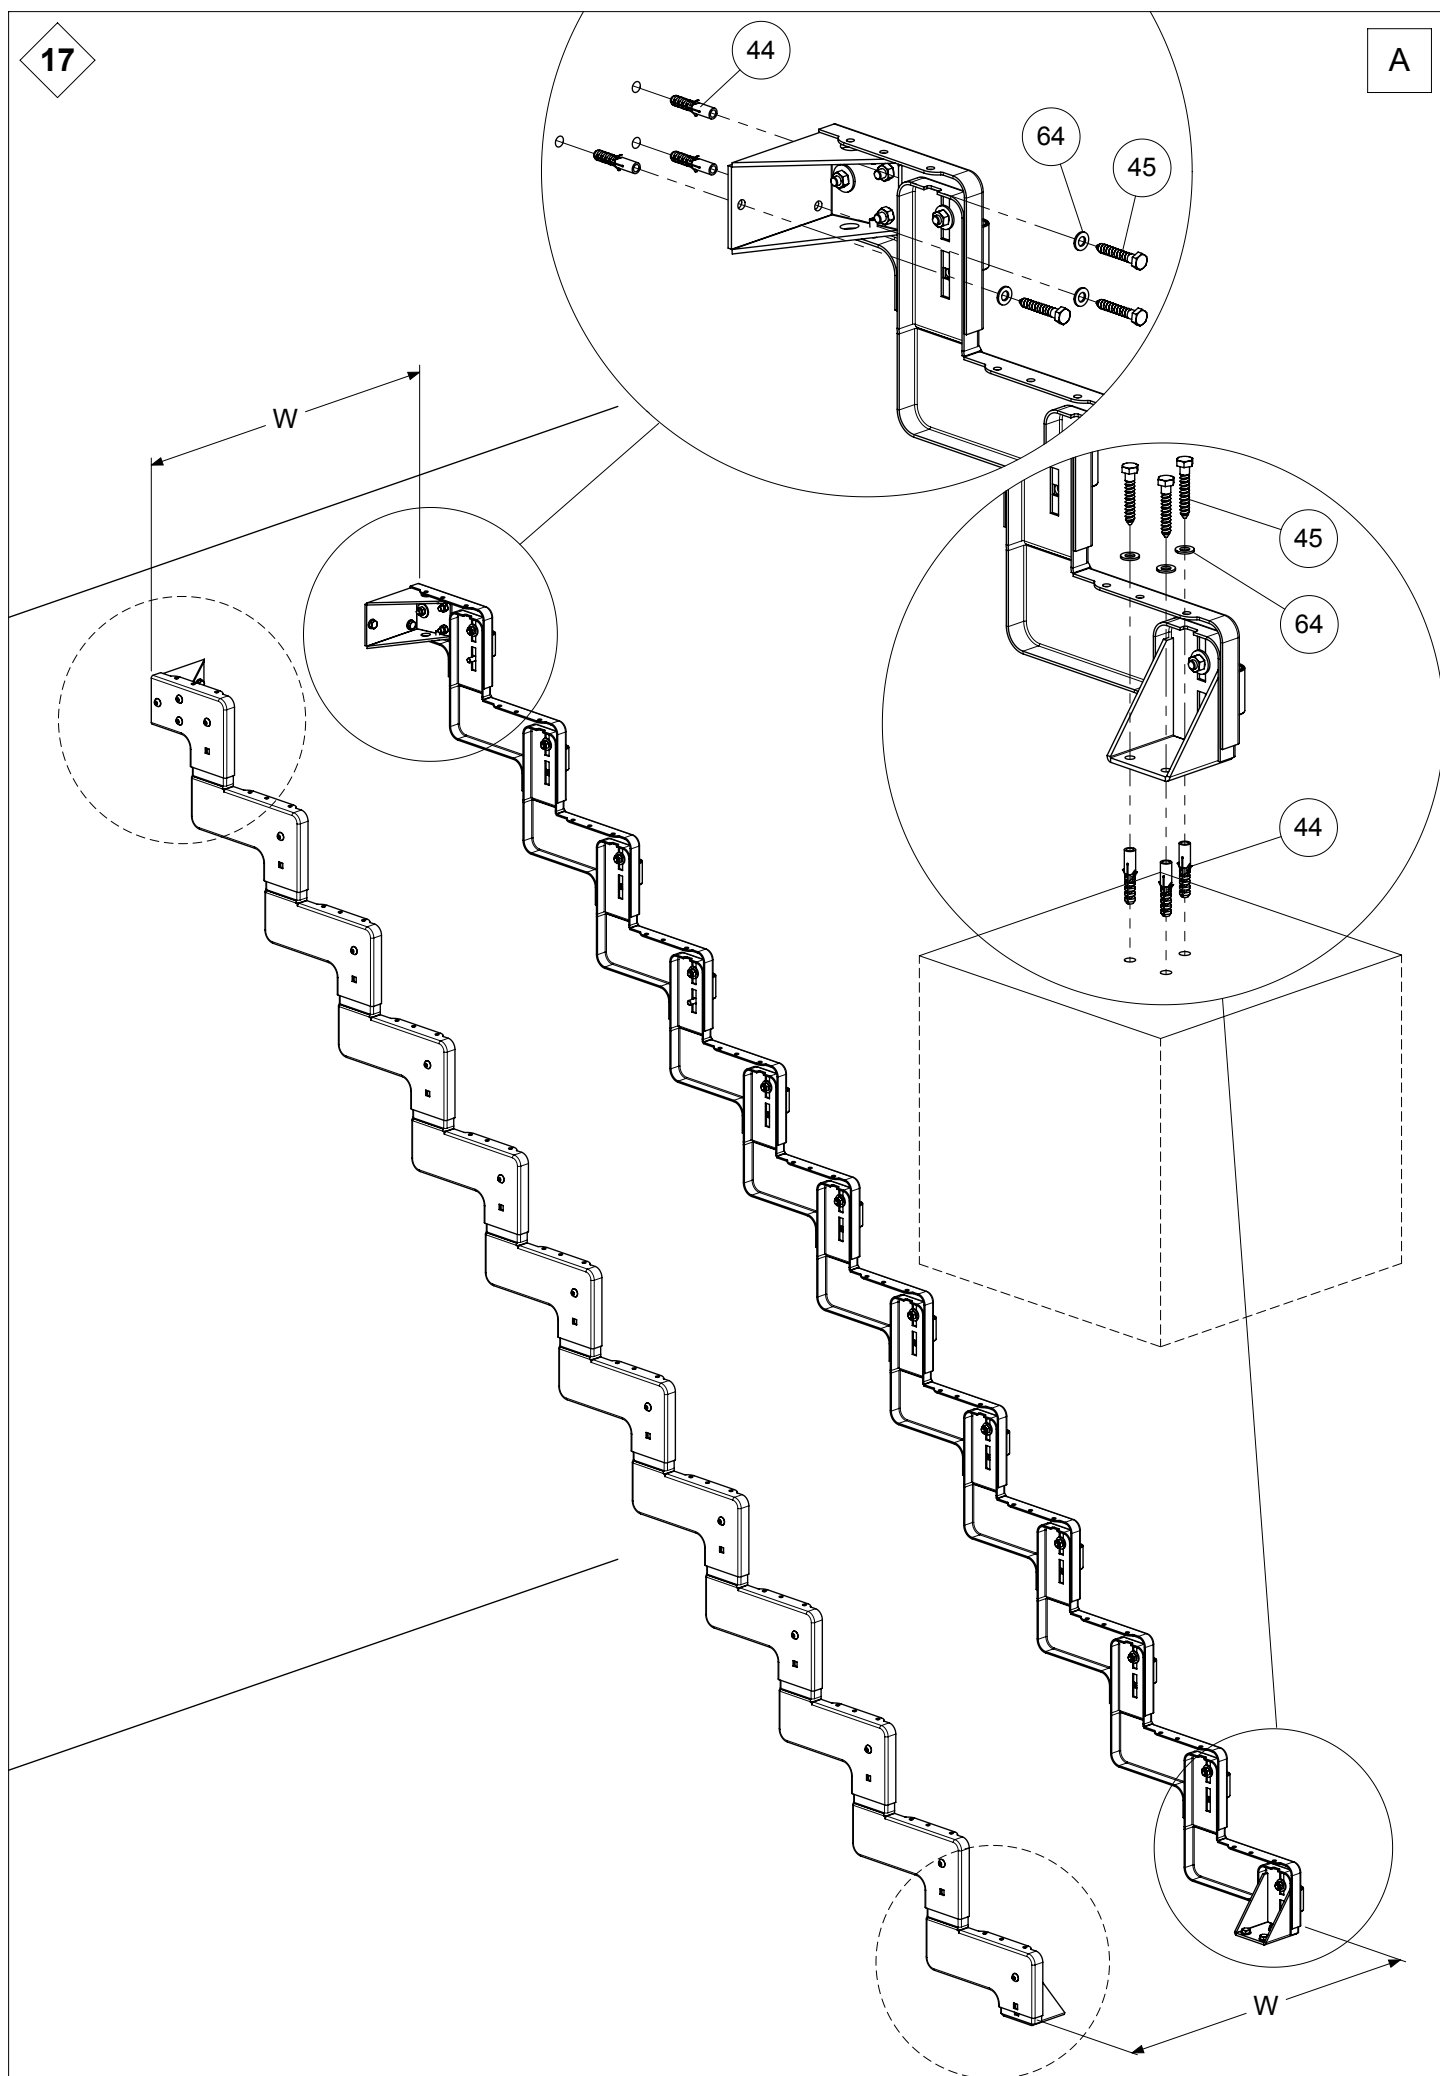

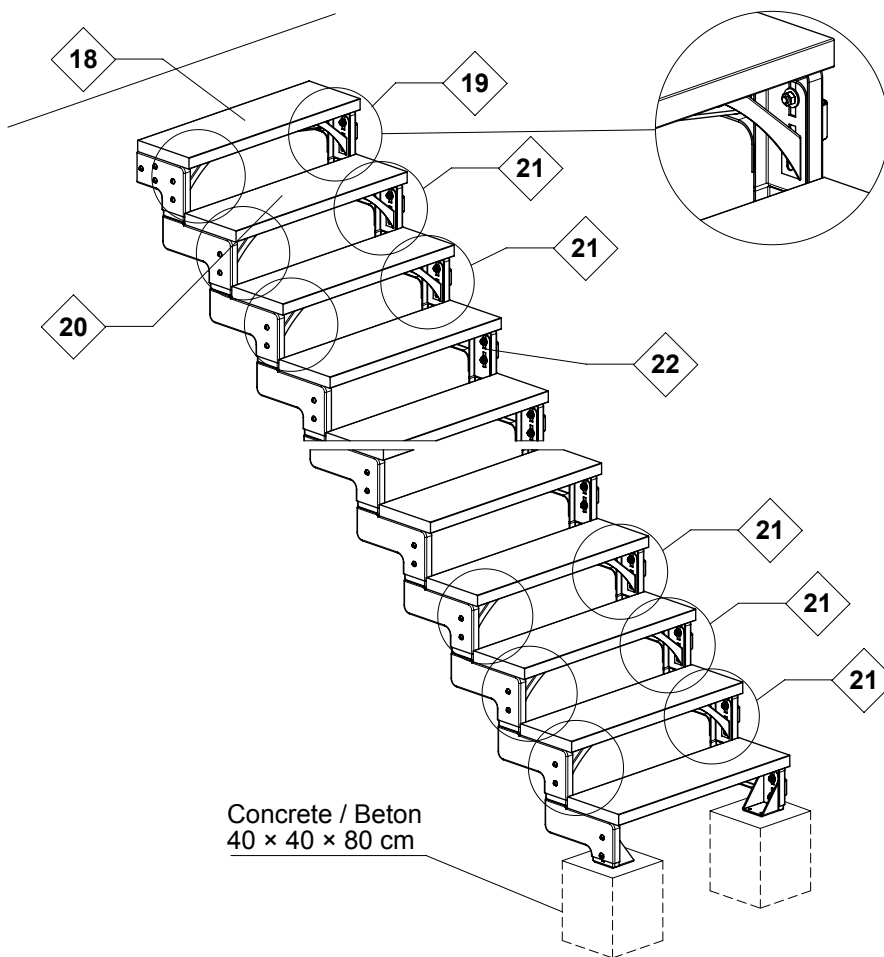


 If more than
6 steps:
Add
 9 + 10
 Wenn mehr als
6 Stufen:
 9 + 10
 hinzufügen

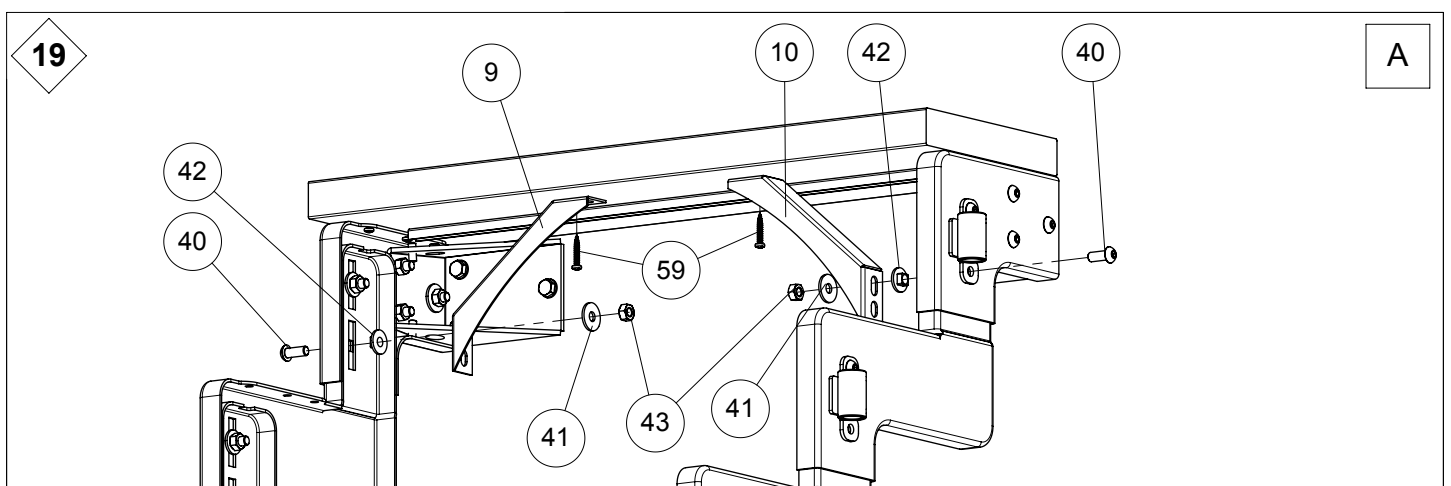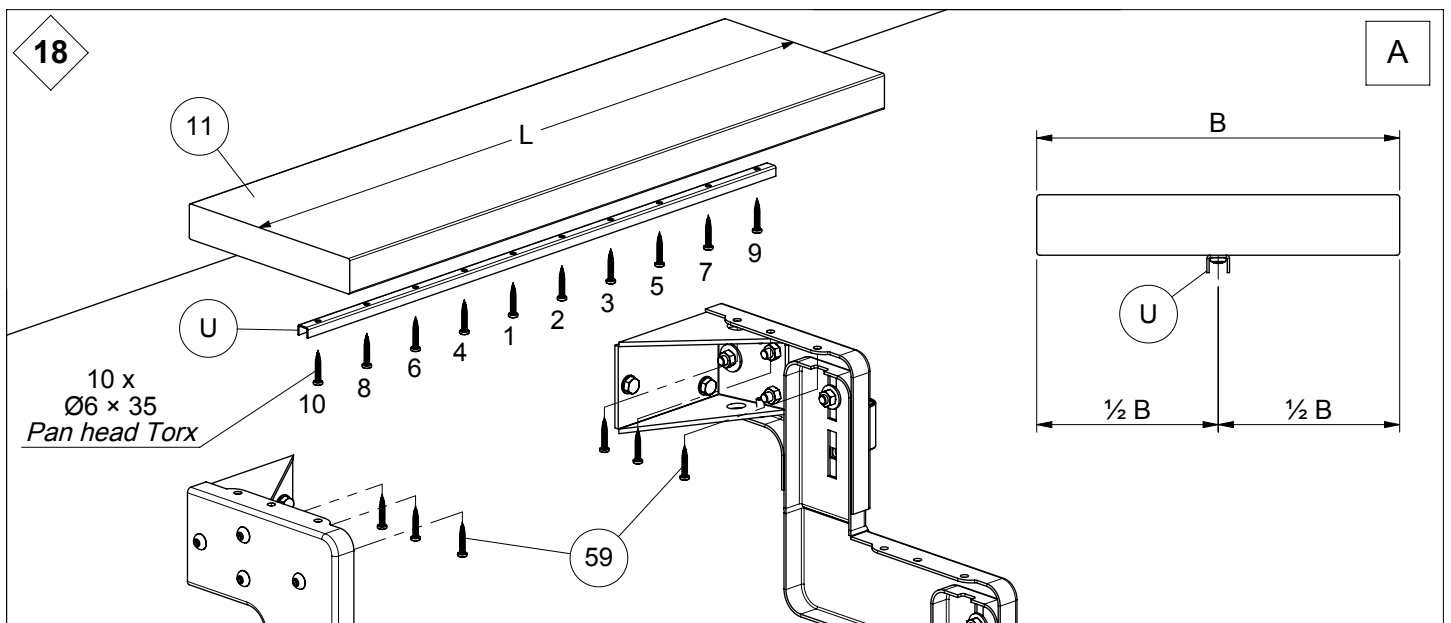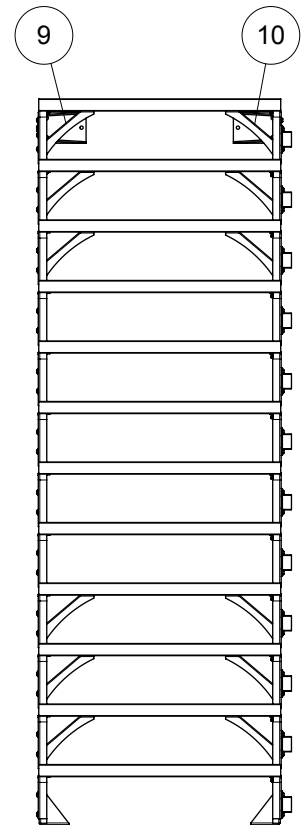

20


A

U
10 x
Ø6 x 35
Pan head Torx

59


21




A




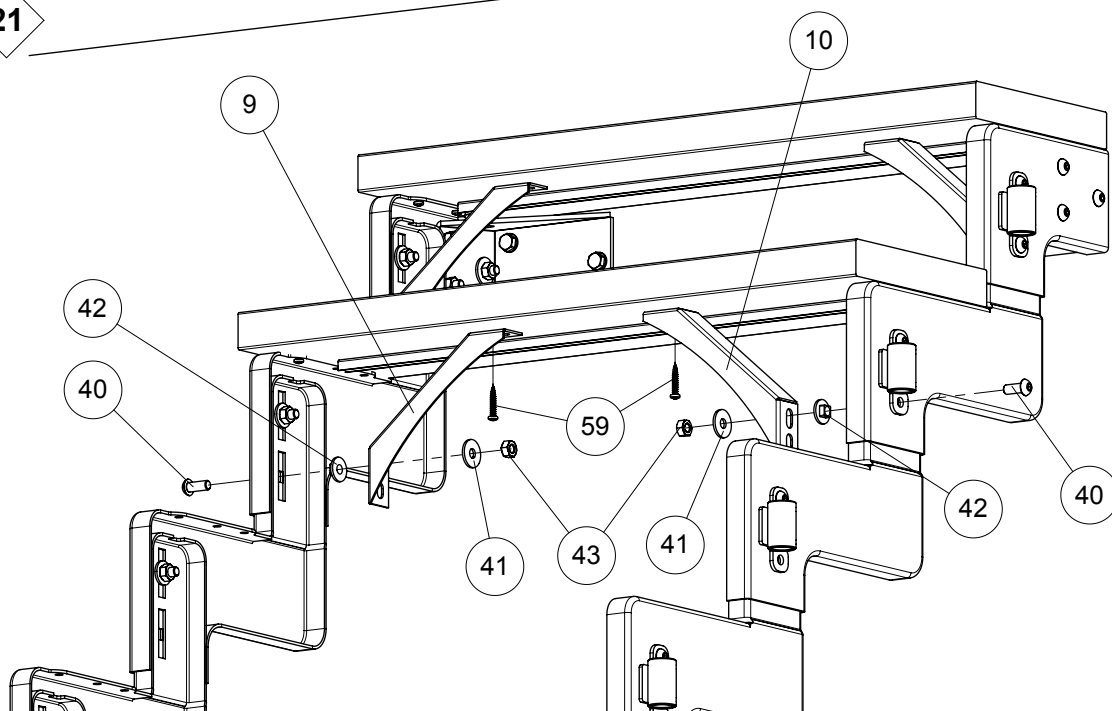






22

A

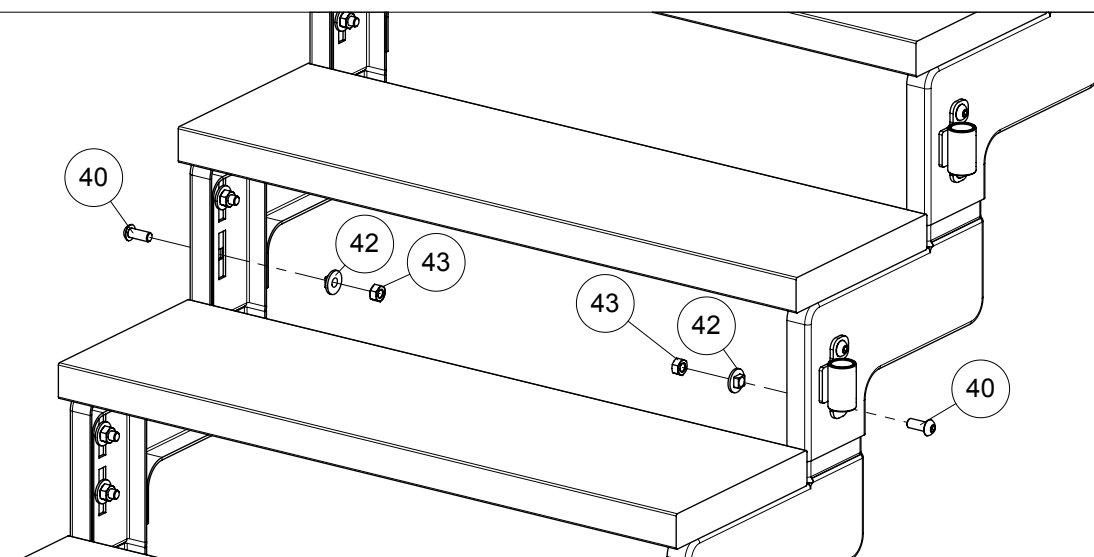

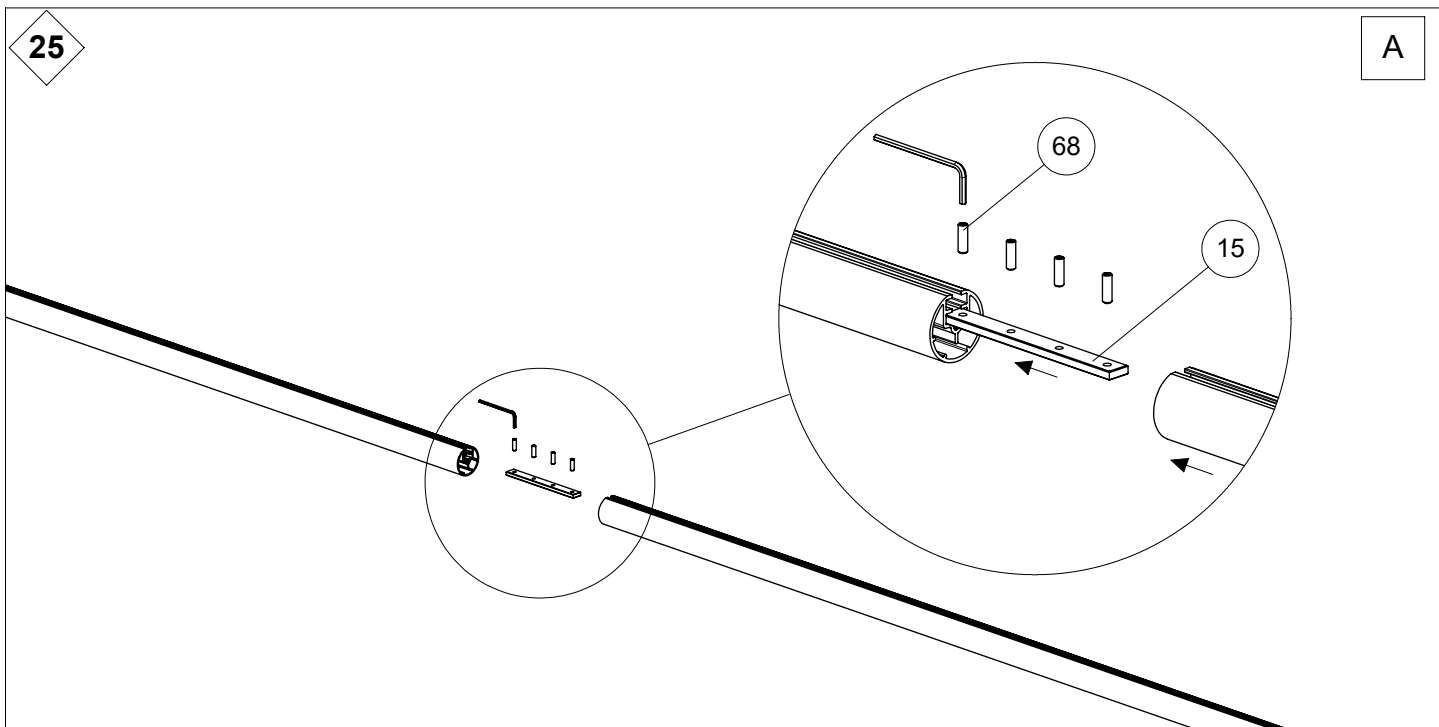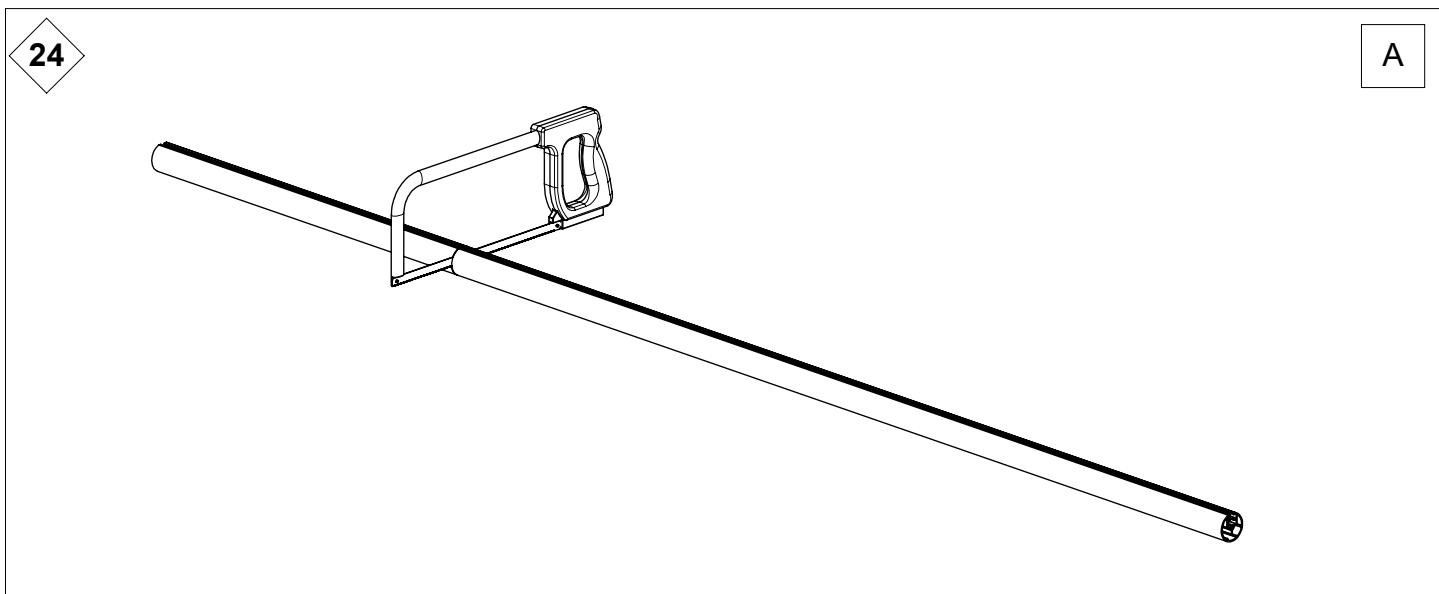
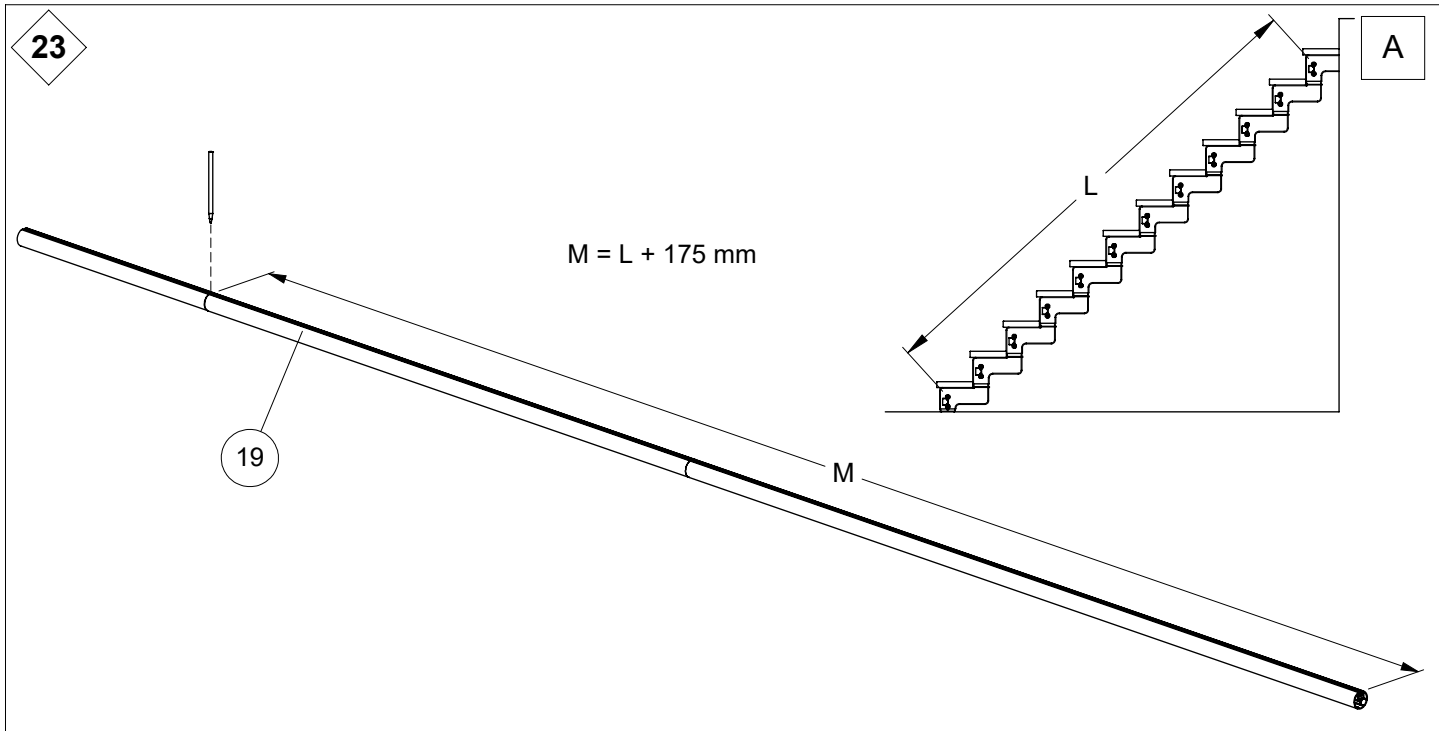


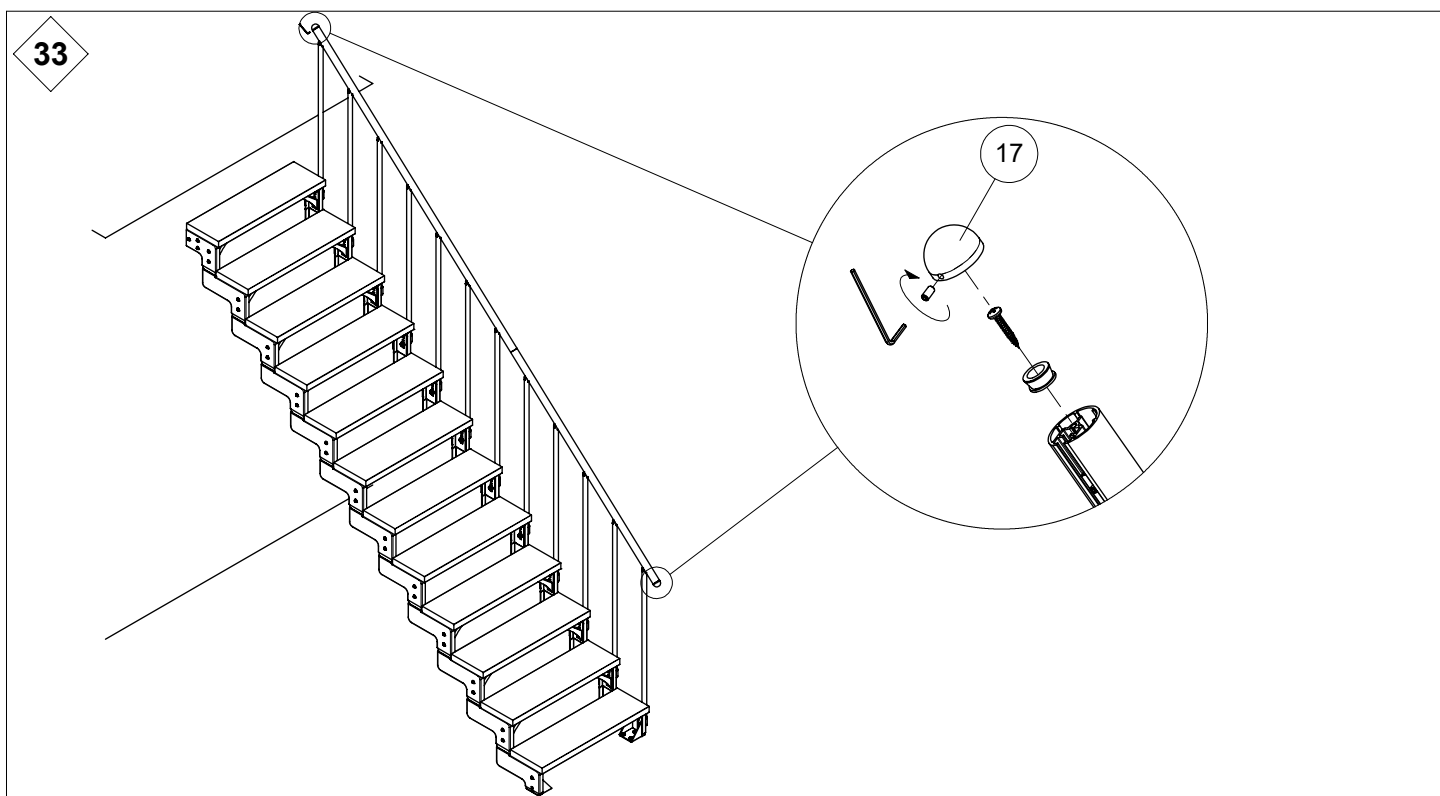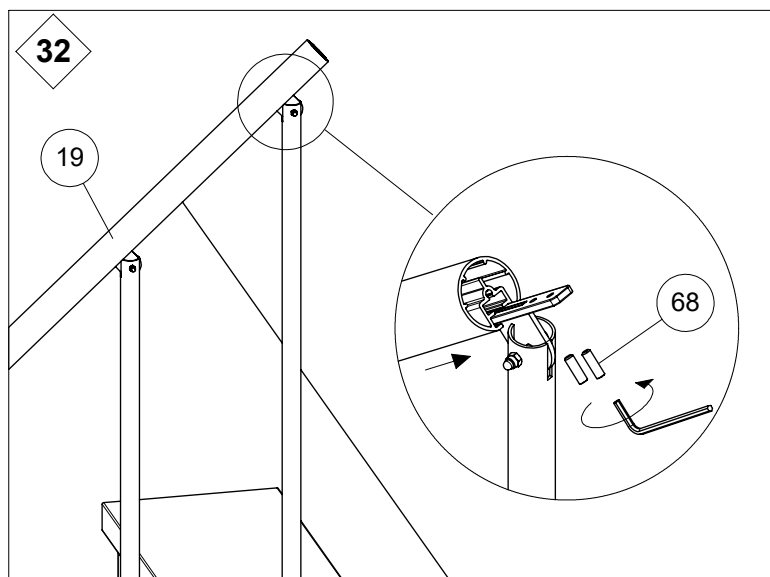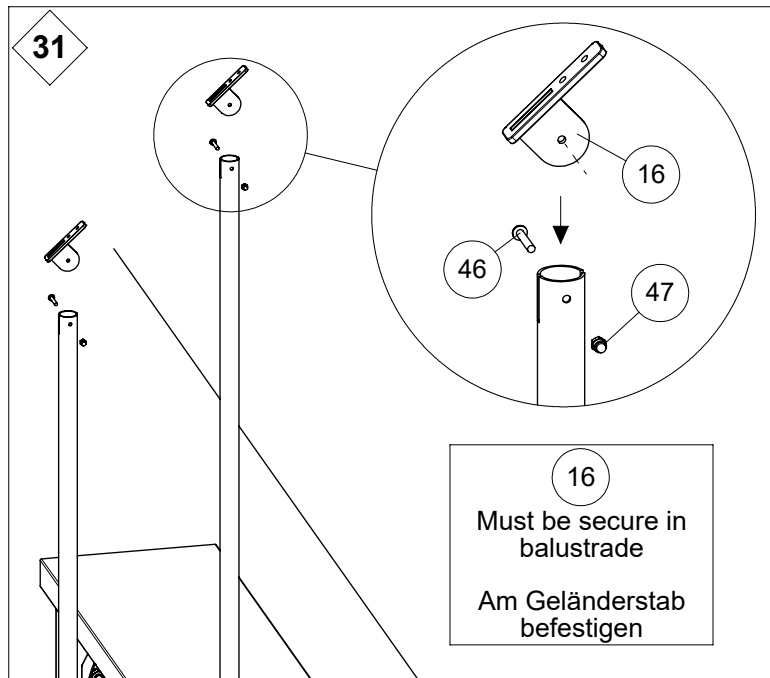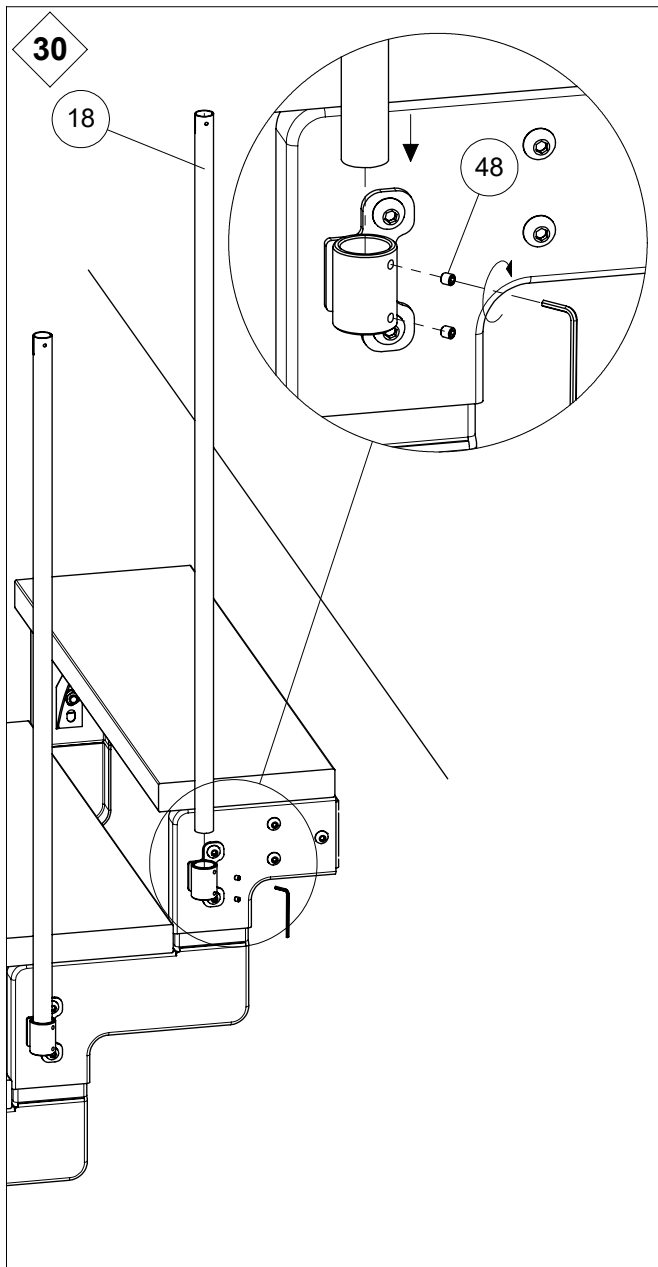

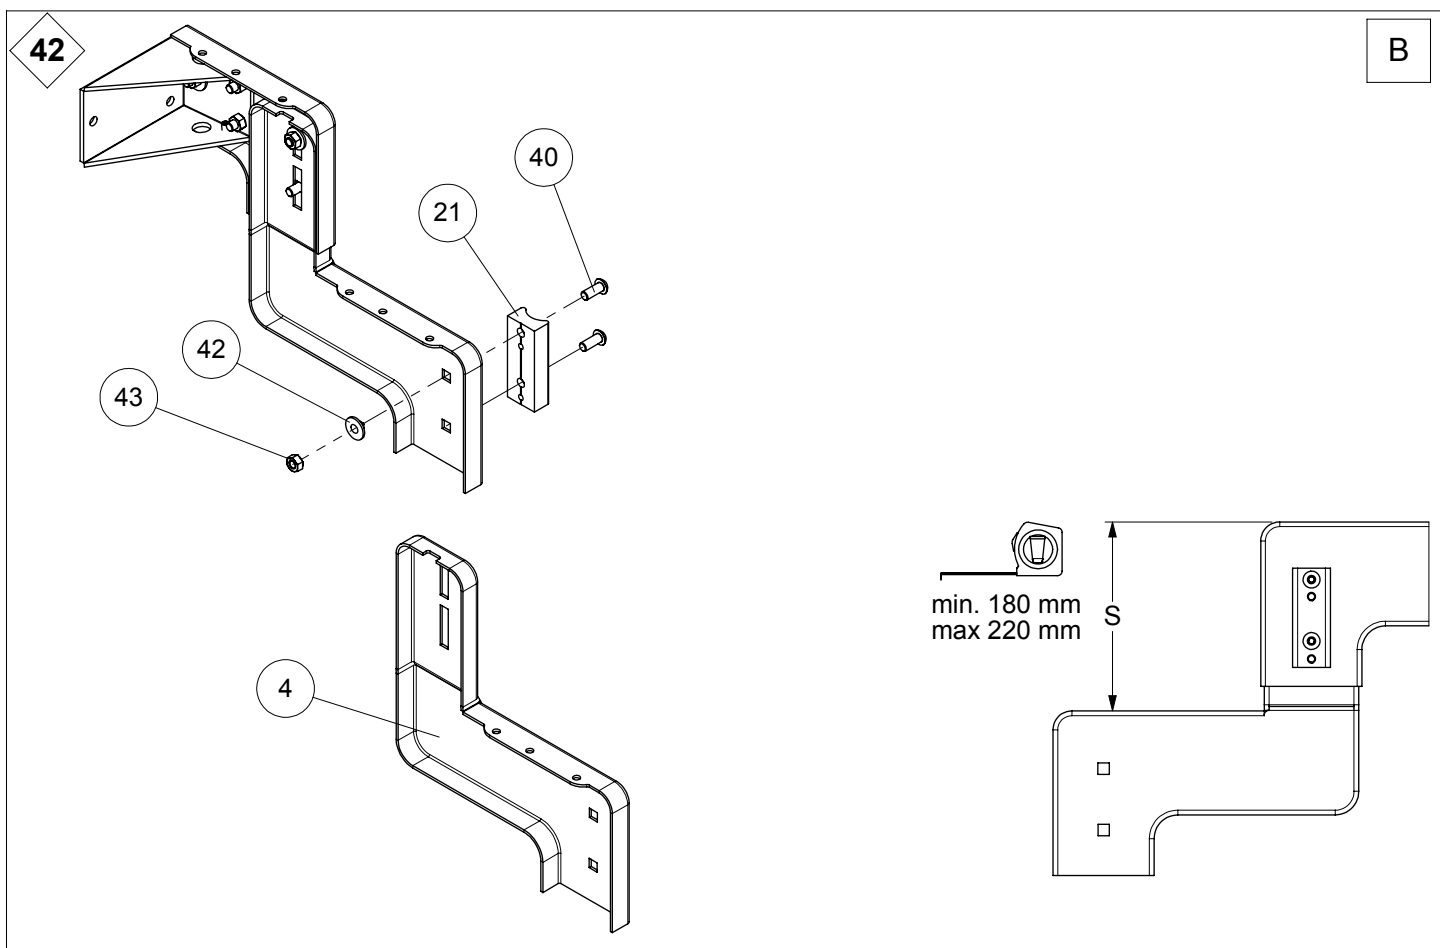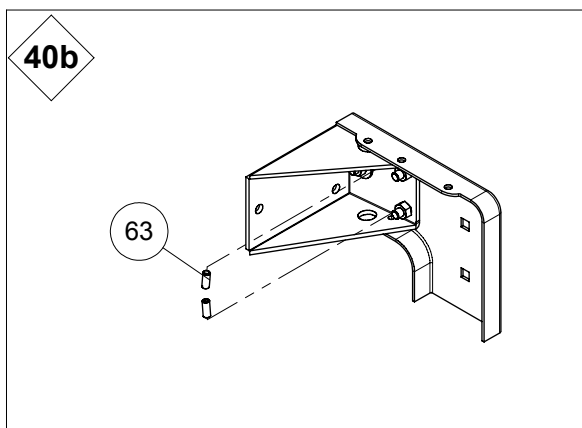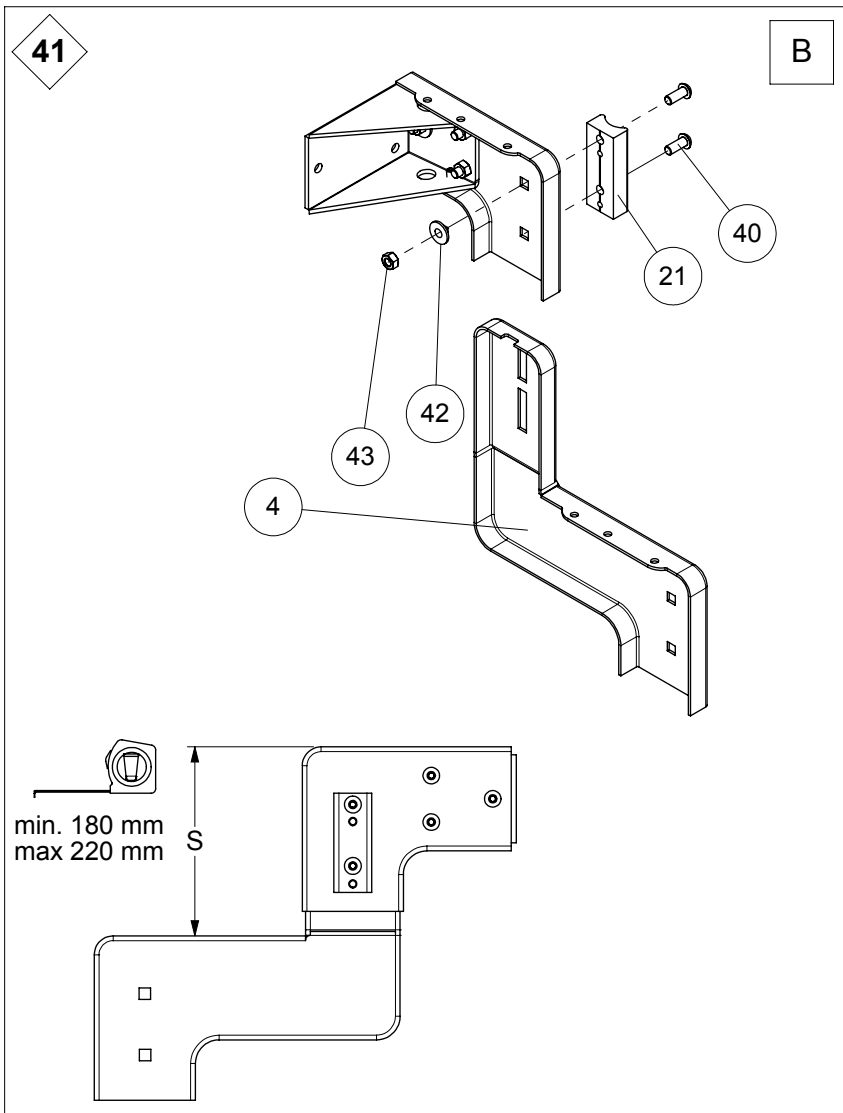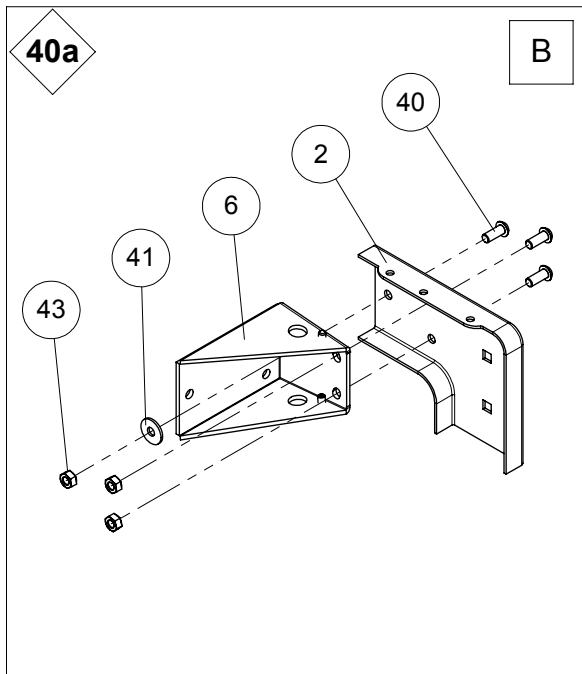



43

B

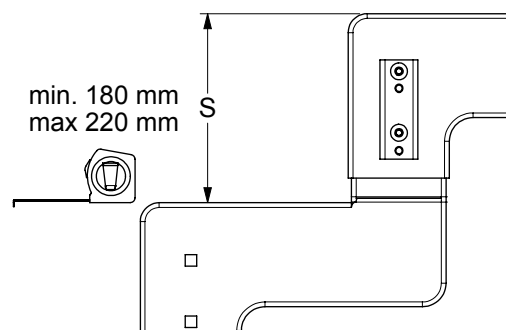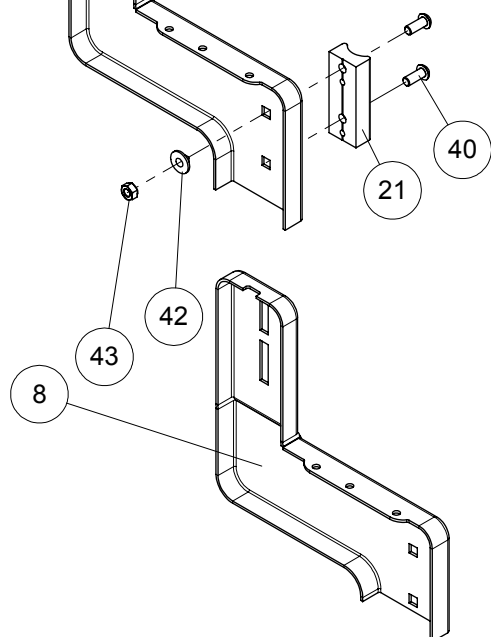



44

B

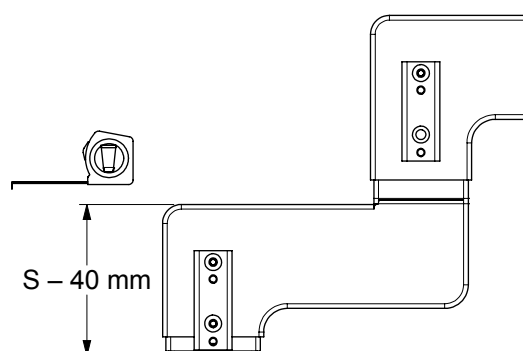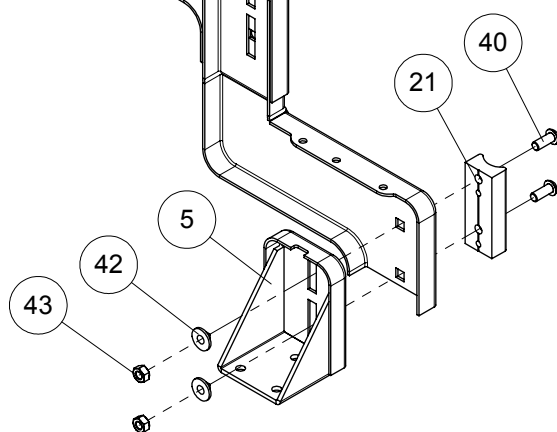


Stufe / Step	W
80 cm	803 mm
100 cm	1003 mm





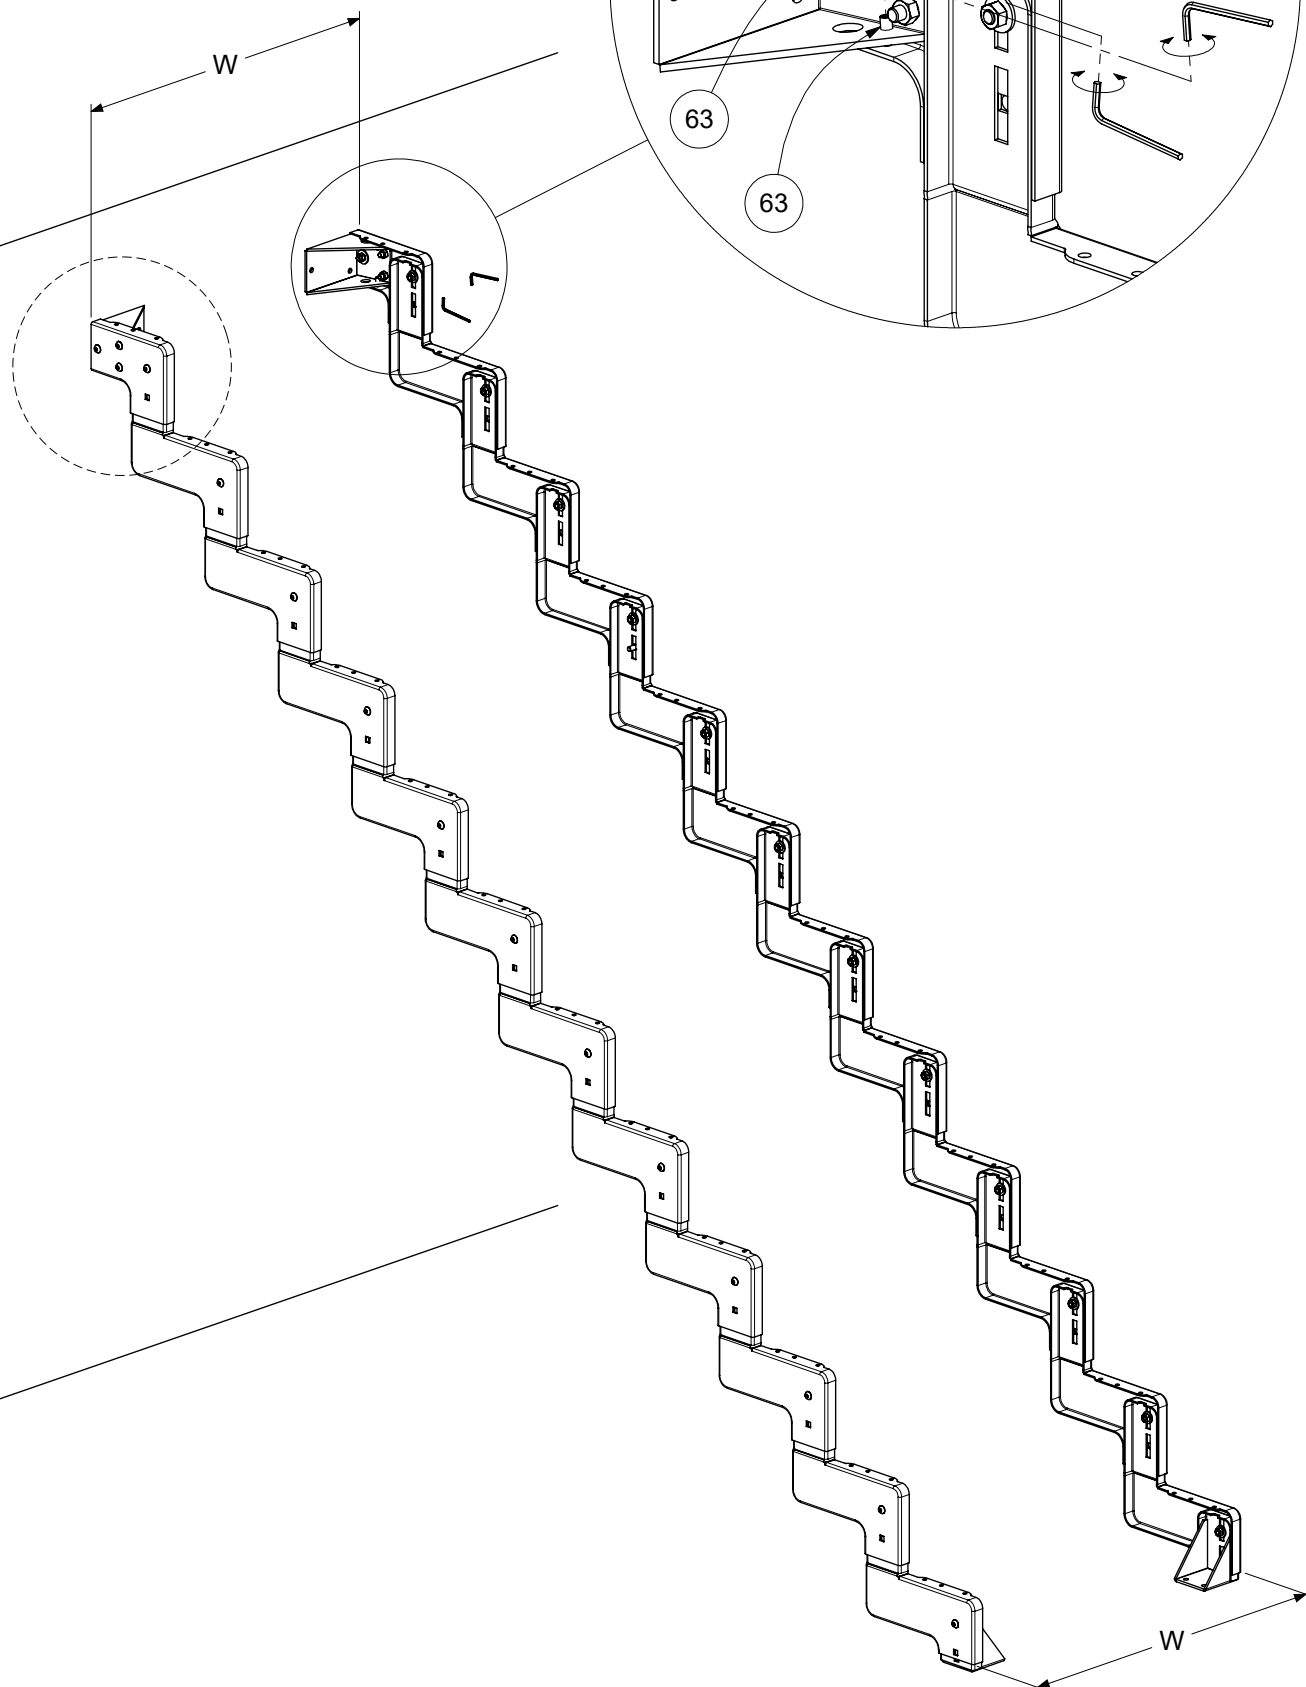


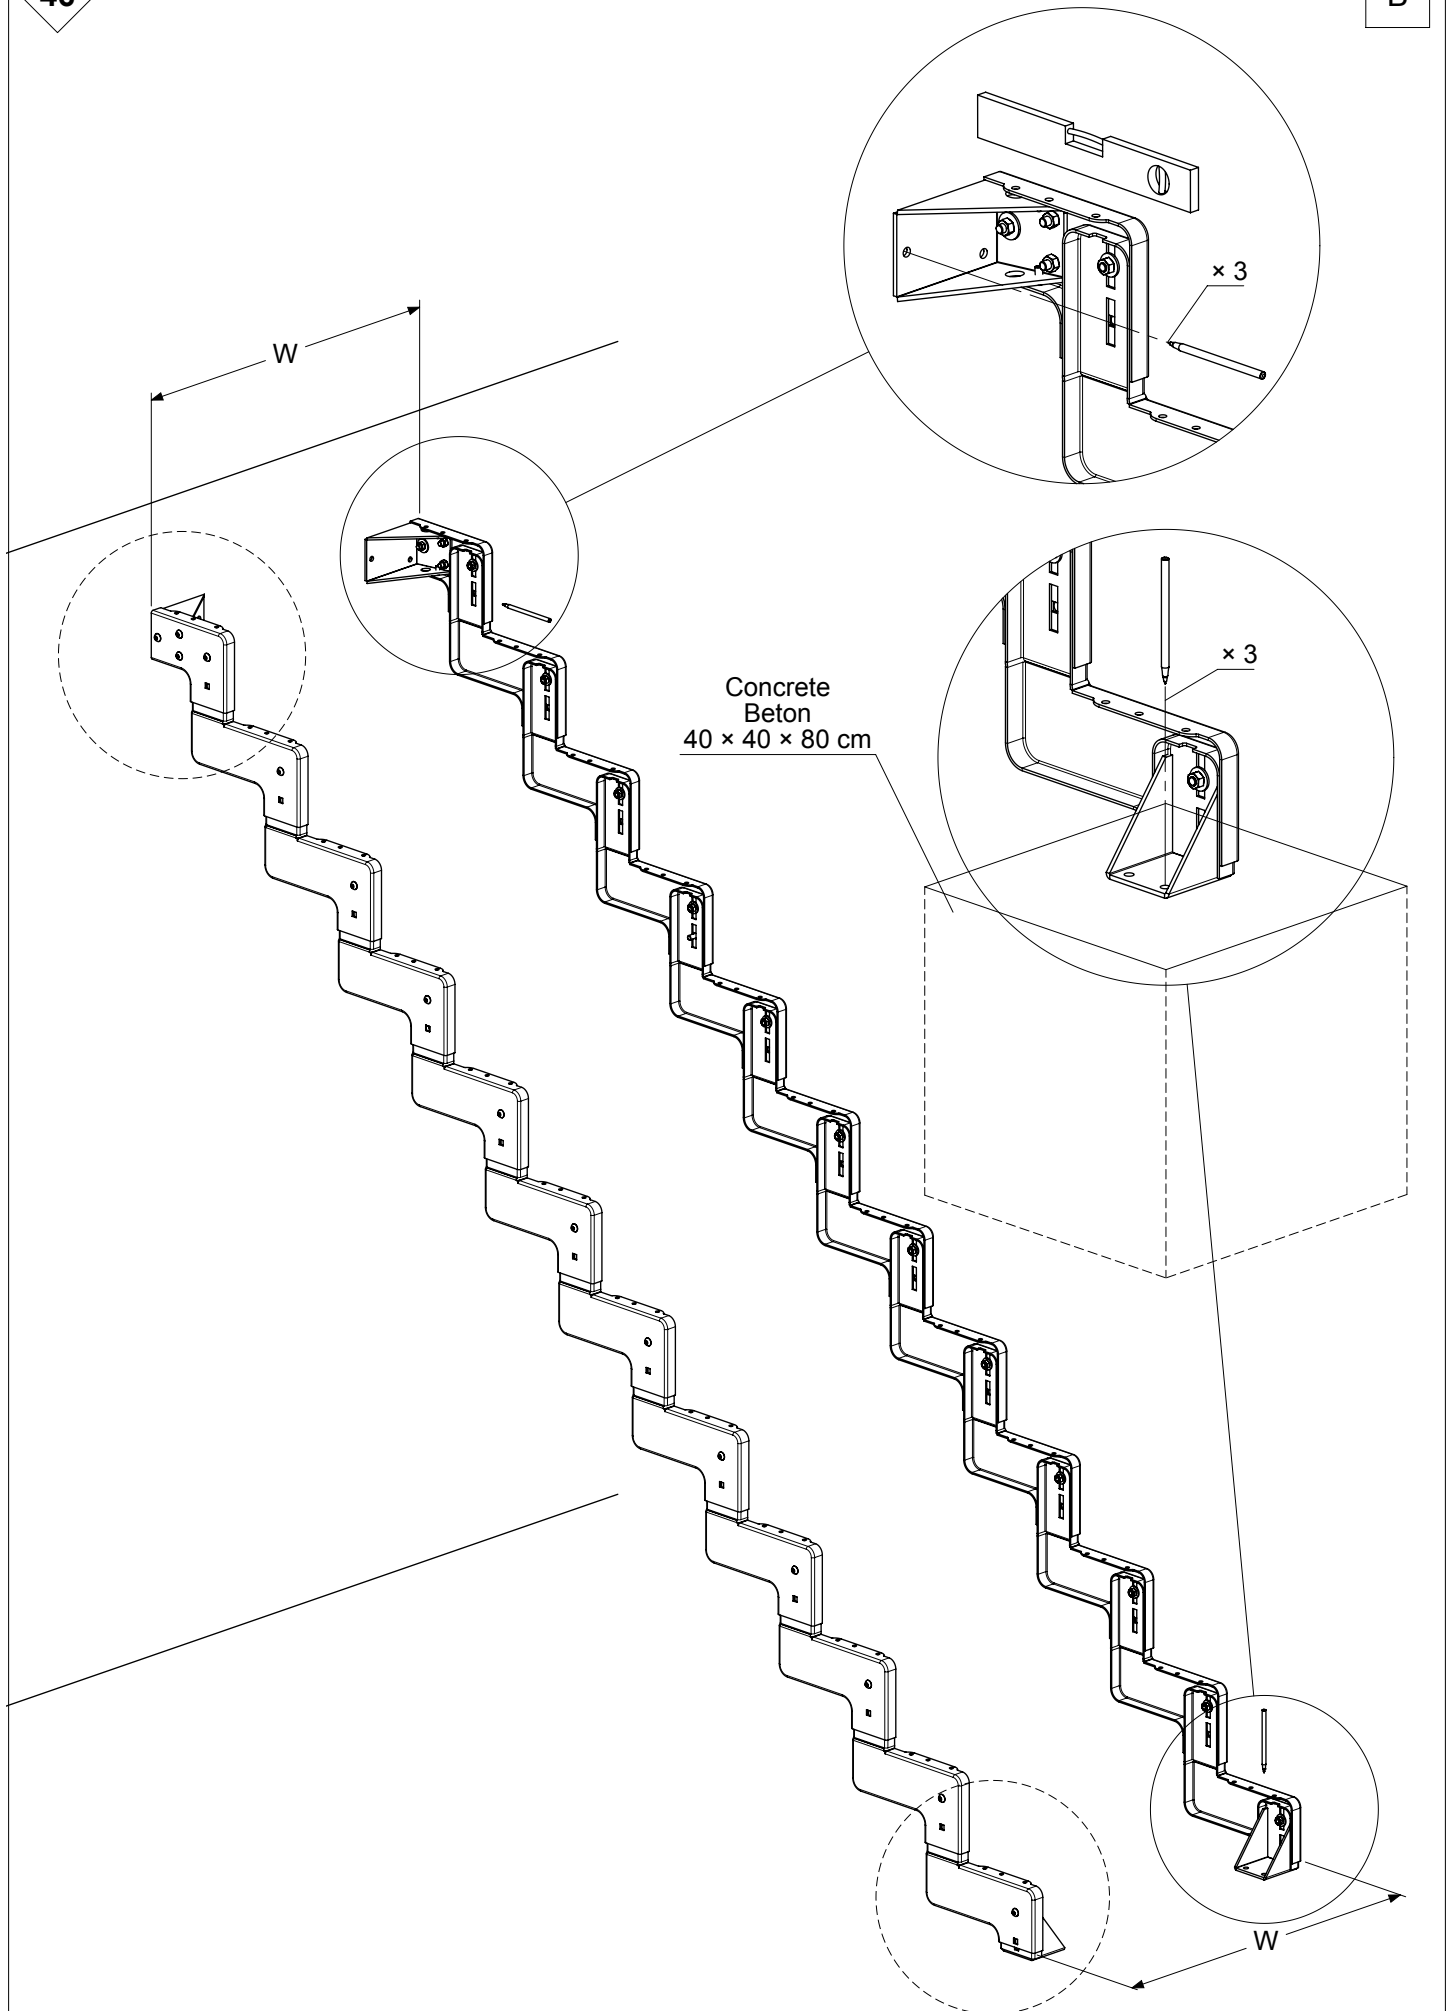

47

B

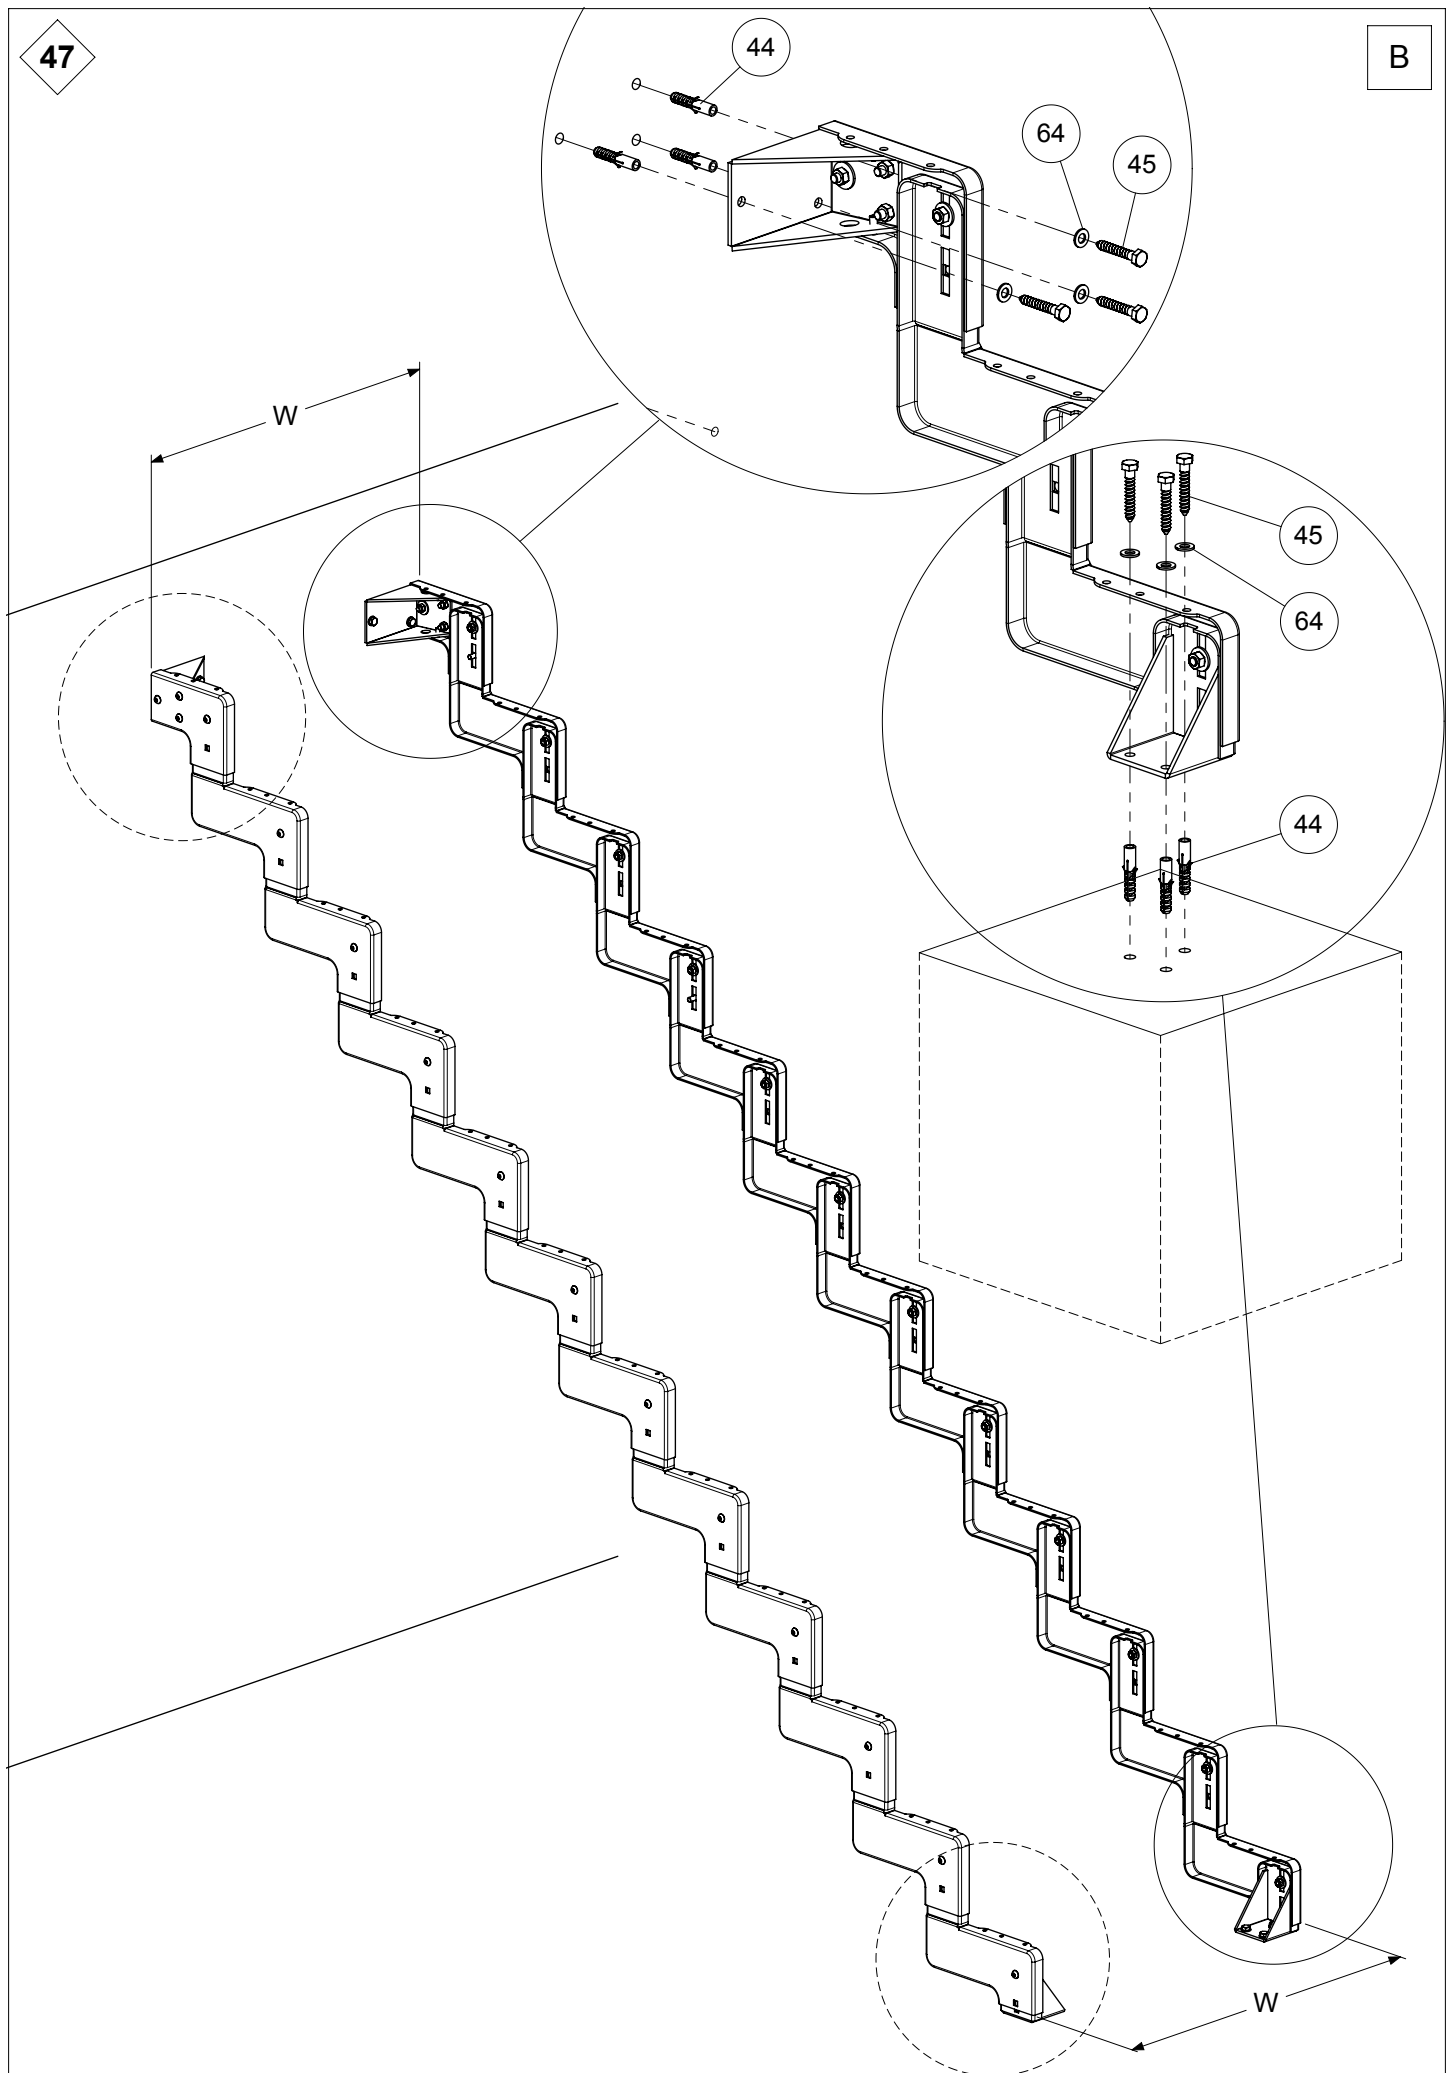

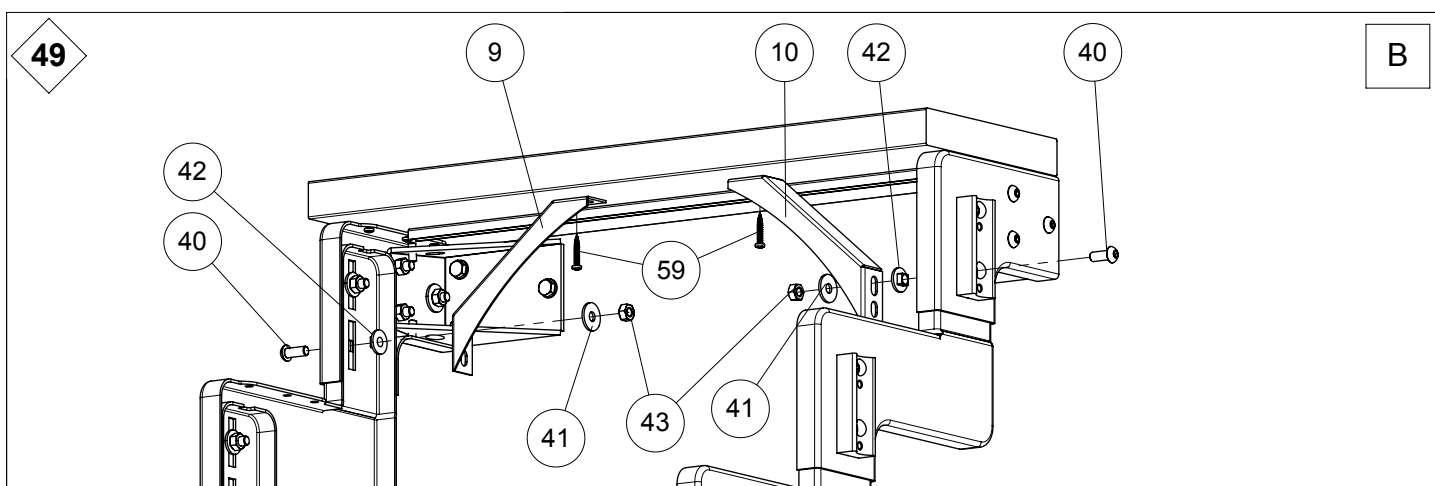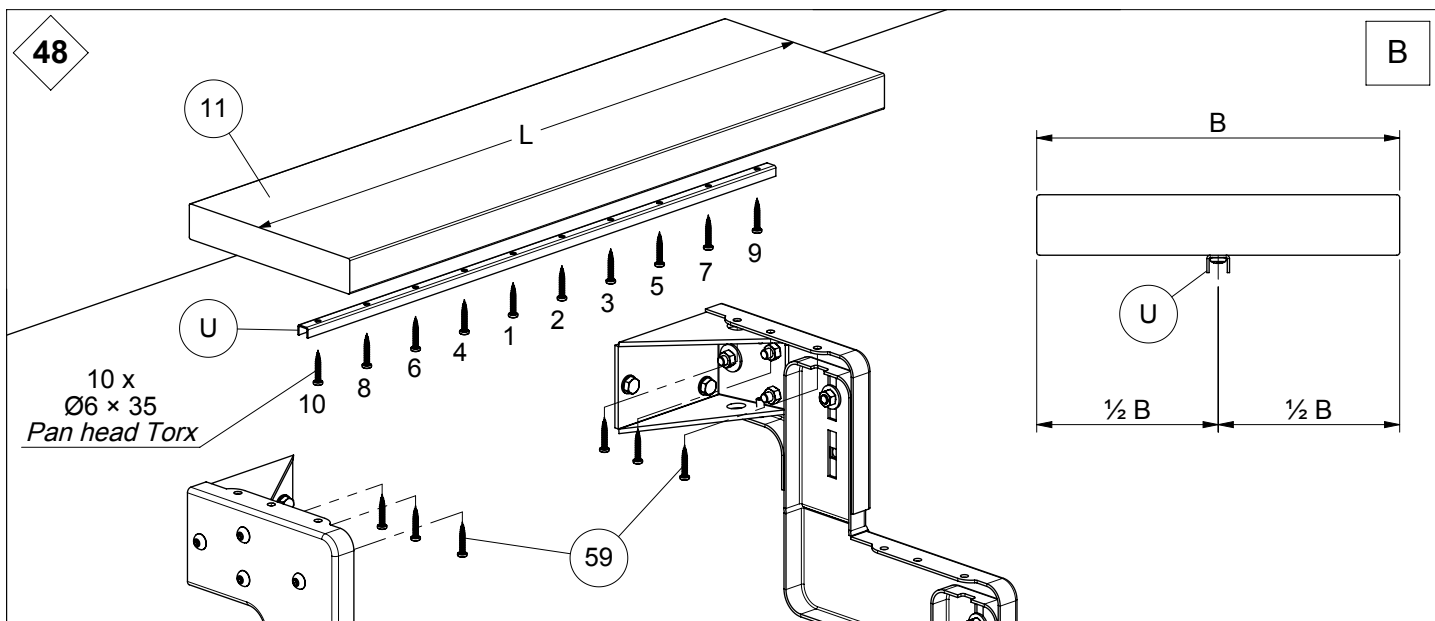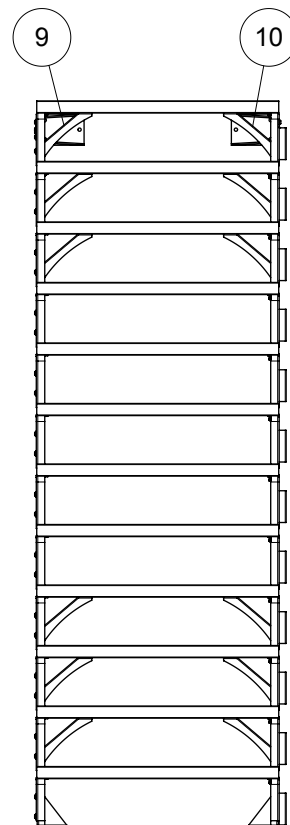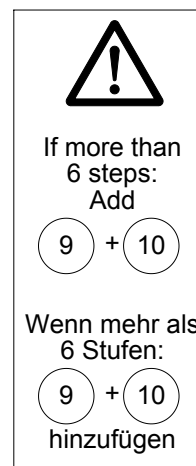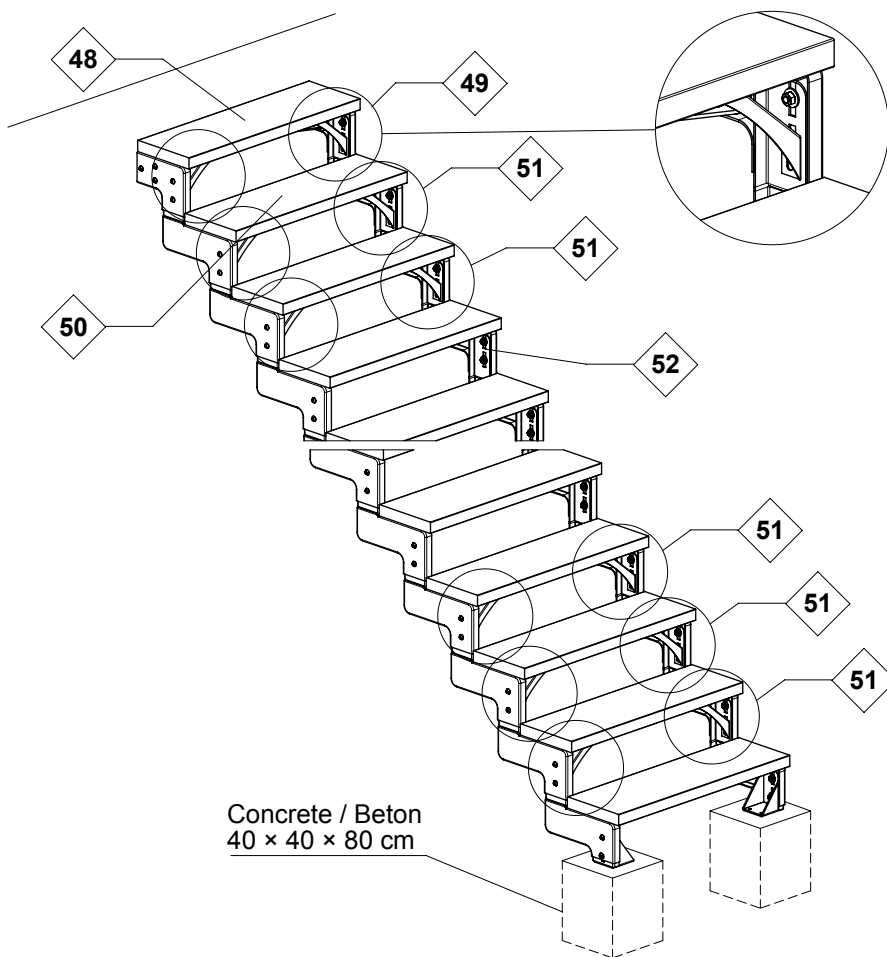

50


B

U
10 x
Ø6 x 35
Pan head Torx

59


51








B





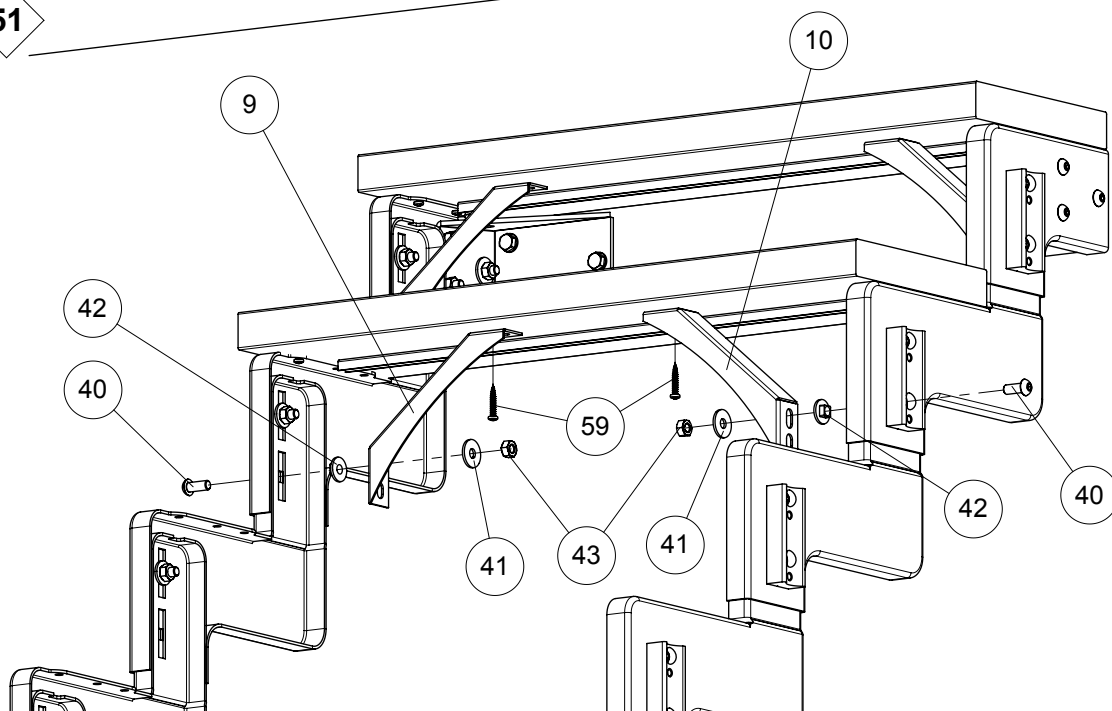


52

B

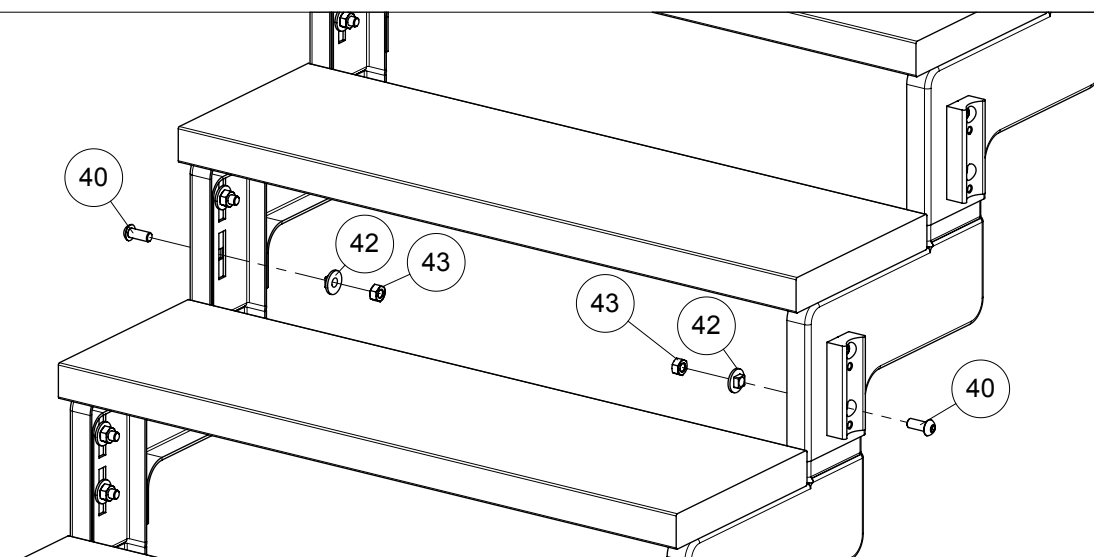

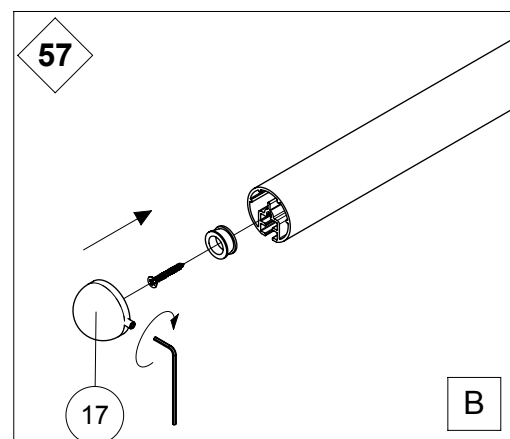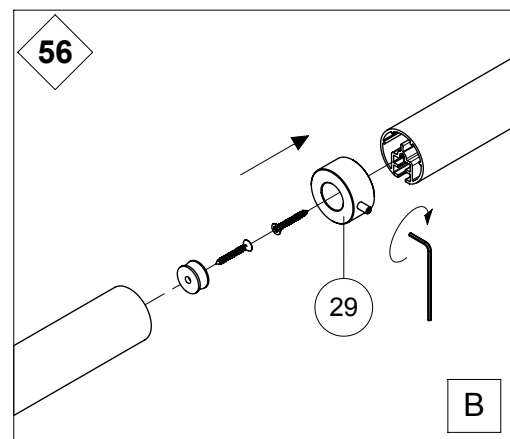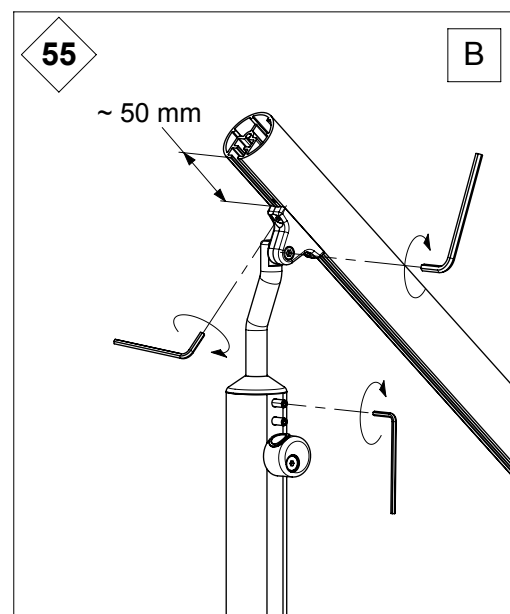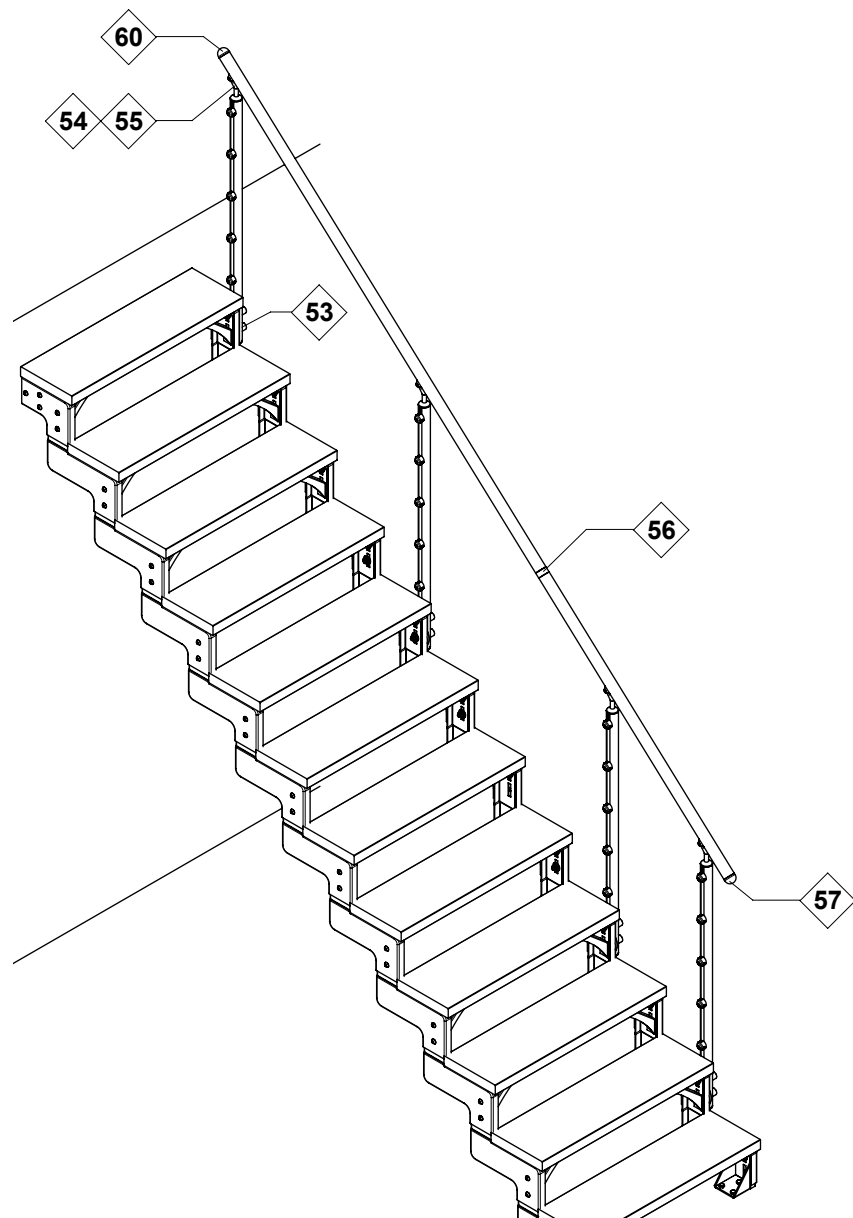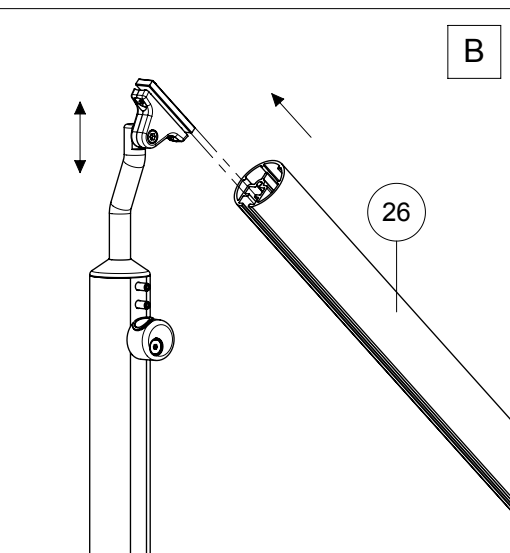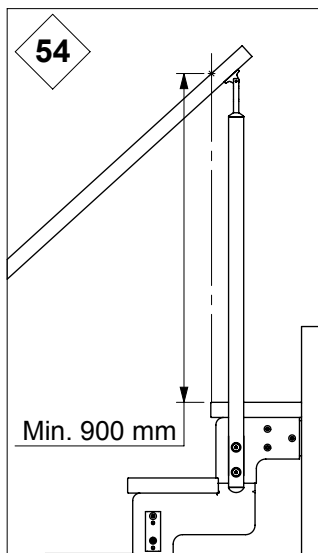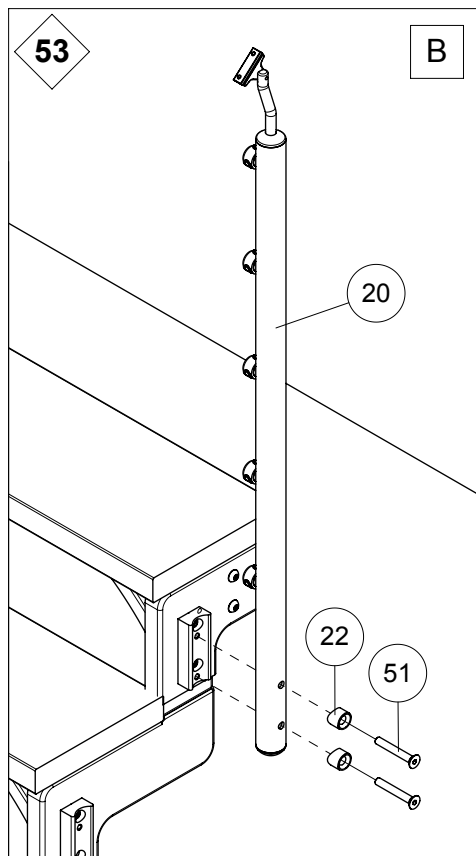

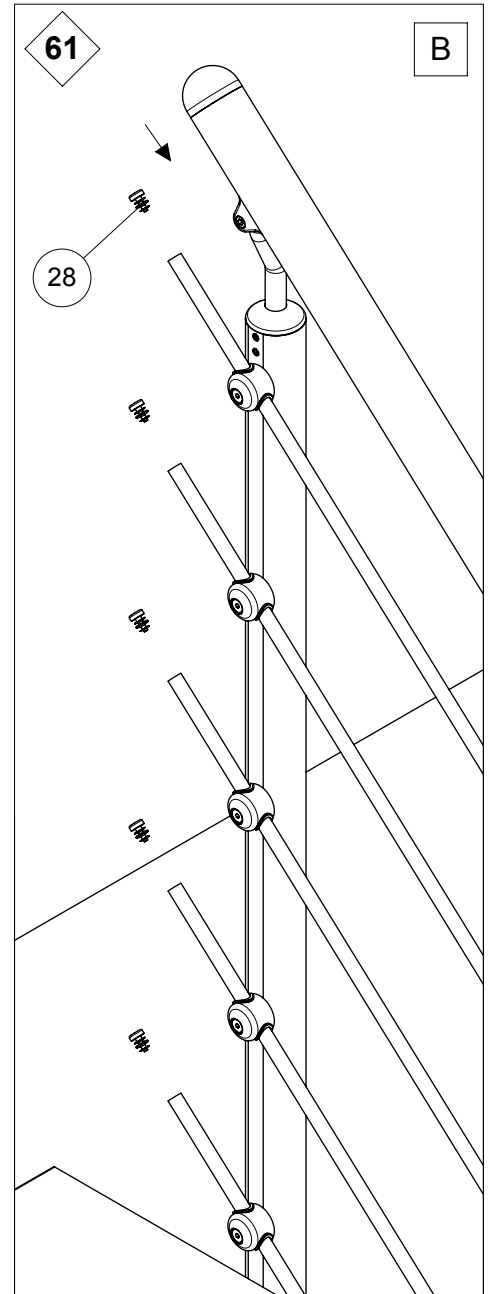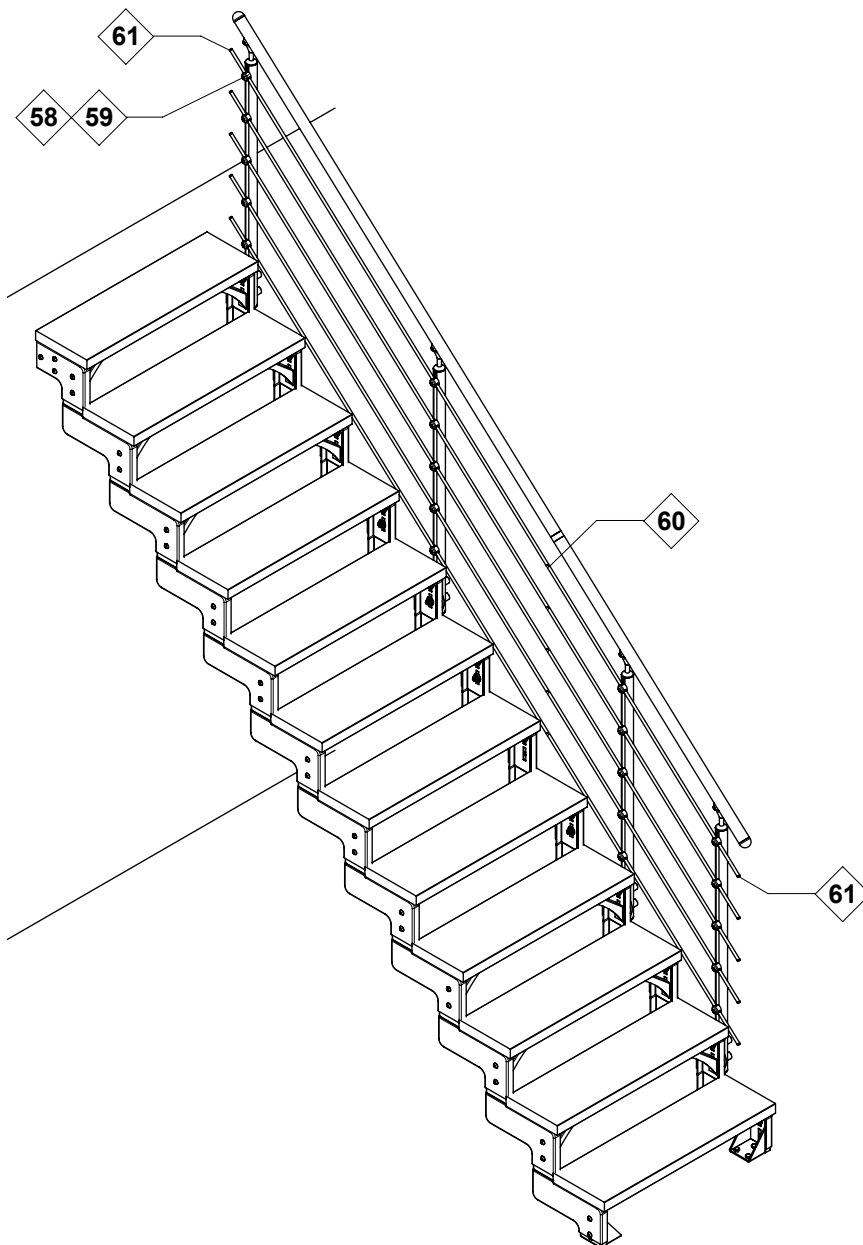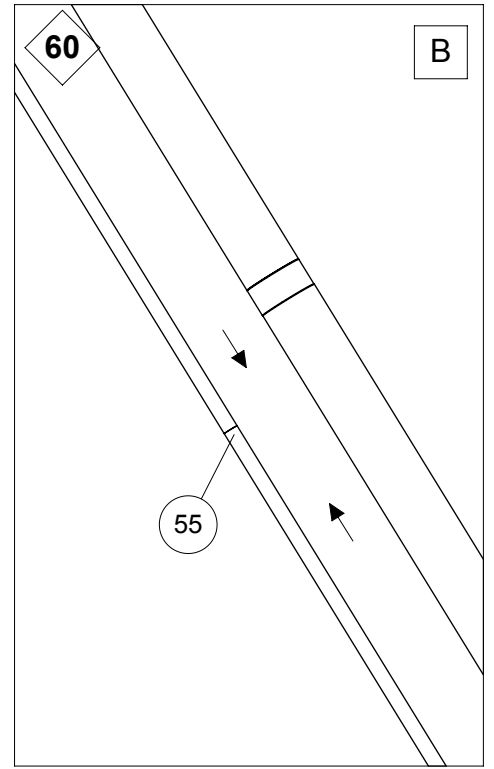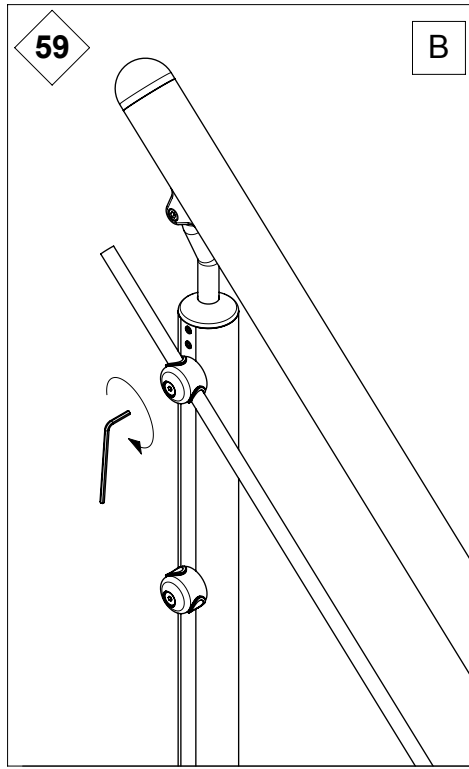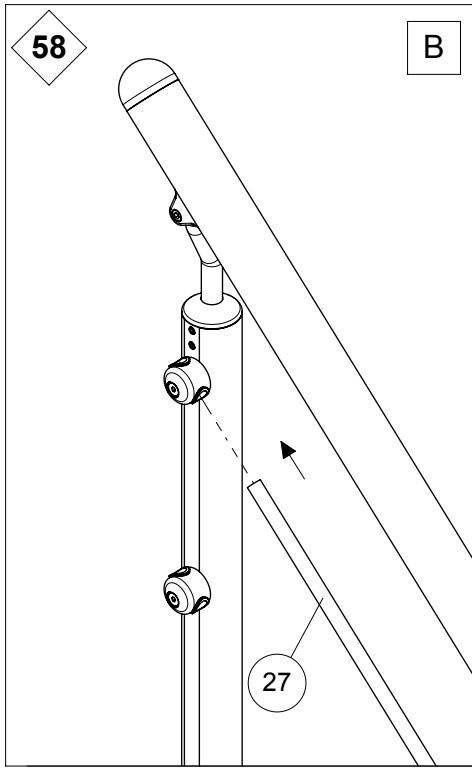



We recommend
using a support
column from 8 treads
and if $W = 100\text{ cm}$

Ab 8 Stufen und $W =$
100 cm empfehlen
wir eine Abstützung
der Treppe

