
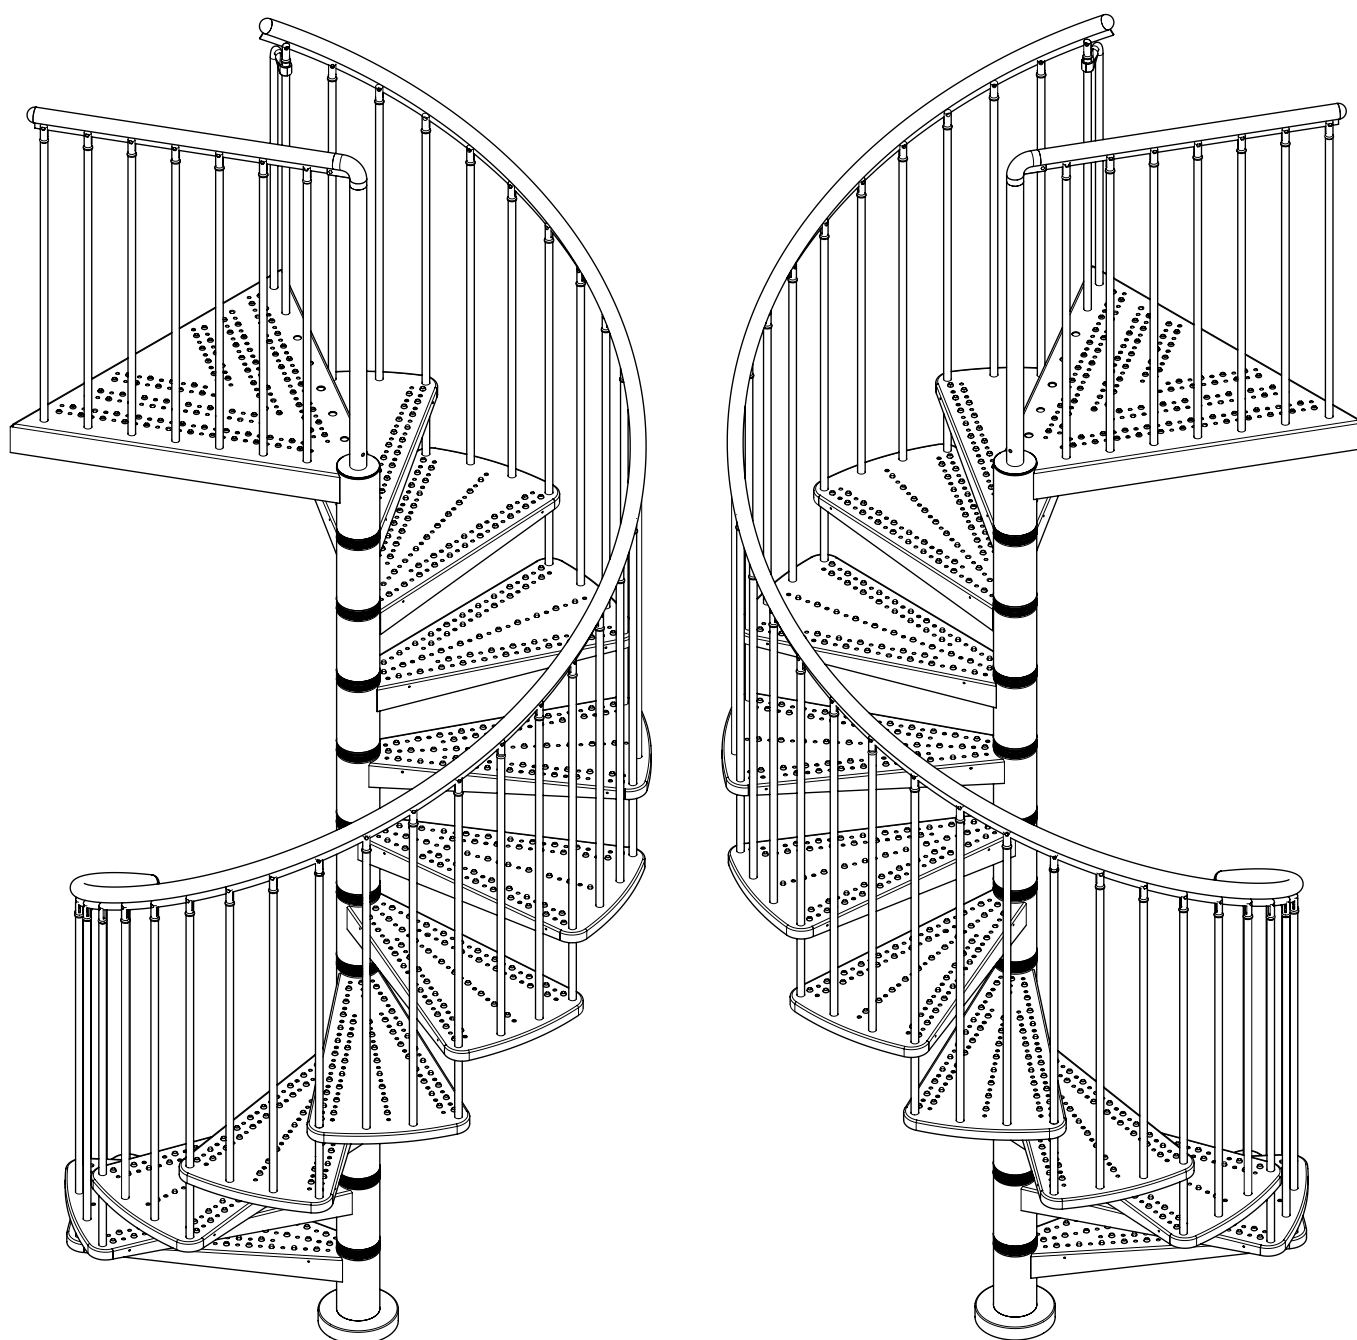
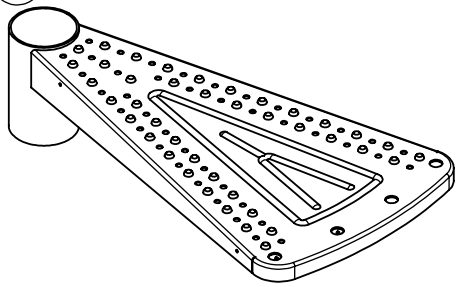
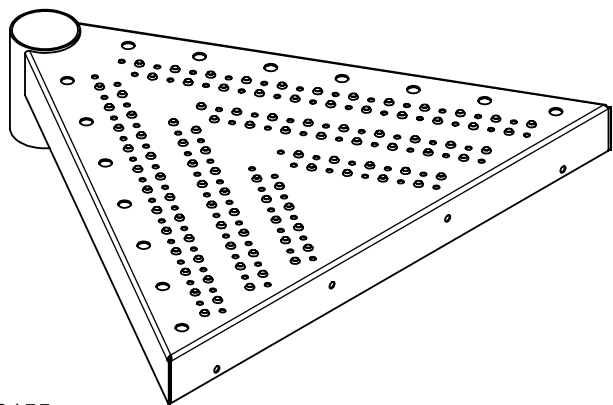


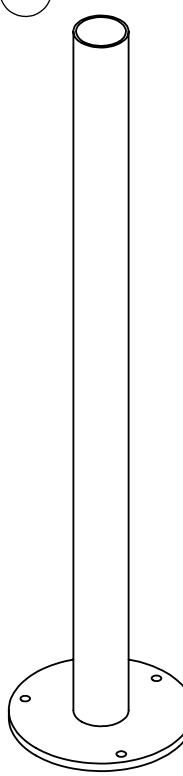

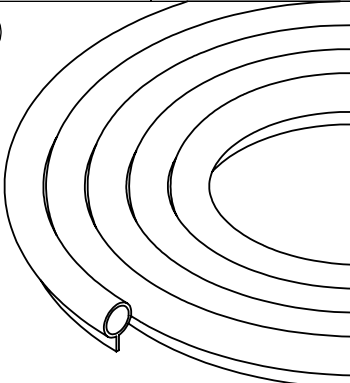






TORONTO / INDUSTRIA V3


Ø 155 cm


Notice de montage
Installation instruction




1  × 11 K2-39064	2  × 1 K2-39155	3  × 23 K1-39221 4  × 72 K1-39040									
5  × 1 K2-39001	6  × 1 K1-39002	7  × 1 K3-07023	8  1075 × 11 K1-39078	9  1042 × 1 K1-39075	10a  940 × 11 K1-39081	10b  1010 × 11 K1-39082	11  931 × 7 K1-39085	12  × 1 K2-39090			
13  × 1 K1-39089	14  × 1 K1-39004	15  × 1 K1-39096	16  × 4 K1-39070	17  × 1 K1-39019	18  × 1 K1-19340	19  × 41 K1-38591	20  × 1 K1-30220		21  × 3 K1-38590	23  × 3 K2-39195	24  × 1 K1-38519
25  × 1 K1-39210	26  × 1 K1-38538										

(27)  × 1 K1-39214	(28)  × 2 K2-39010	(33)  × 5 K1-39030				
(50)  × 7 K3-06070 Ø10 x 60	(51)  × 7 K3-04040 Ø10	(52)  × 7 K3-08001 Ø12 x 60	(53)  × 2 K3-05021 M8 x 10	(54)  × 2 K3-03054 M20	(55)  × 2 K3-04021 Ø20	(56)  × 118 K3-05055 M6 x 5
(57)  × 9 K3-08002 Ø8 x 40	(58)  × 9 K3-06007 Ø6 x 35	(59)  × 42 K3-03050 M5	(60)  × 42 K3-01201 M5 x 14	(61)  × 1 K3-02089 M8 x 100	(69)  × 1 R1-63272 Ø6 x 25	(70)  × 1 K3-90001

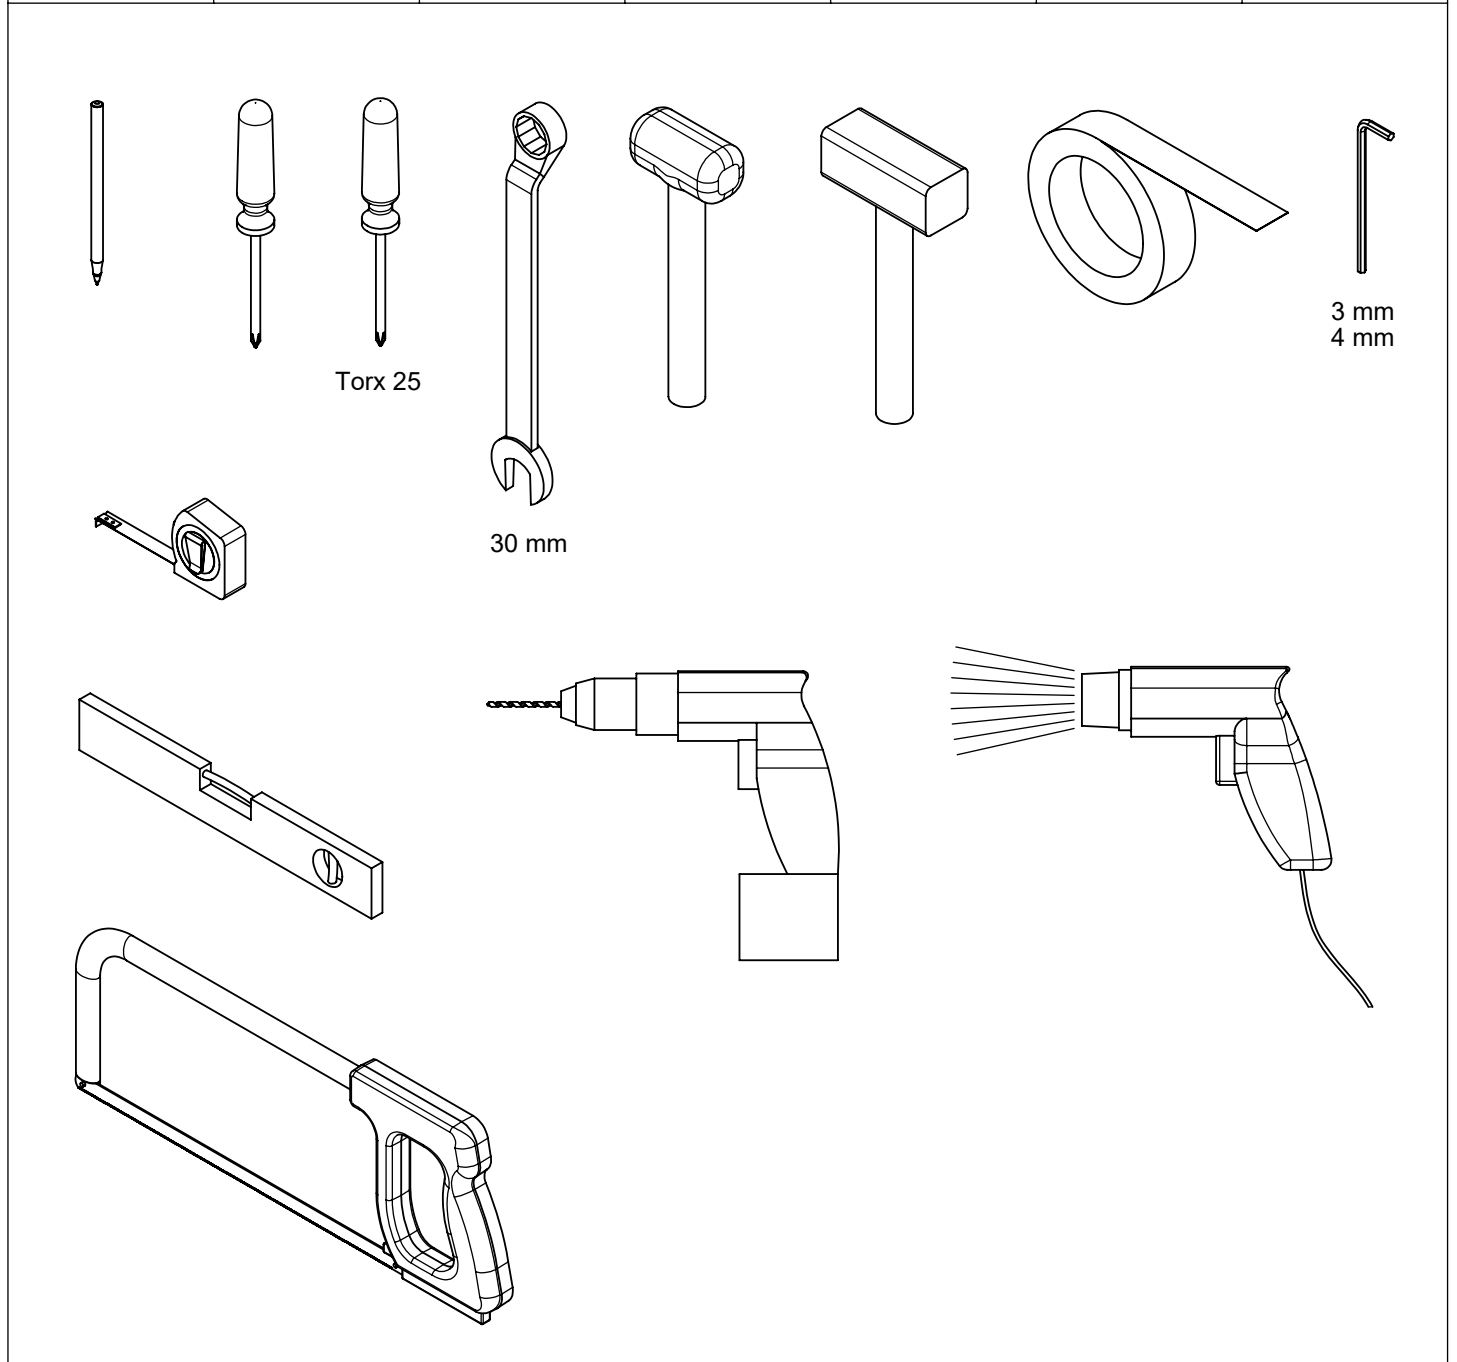


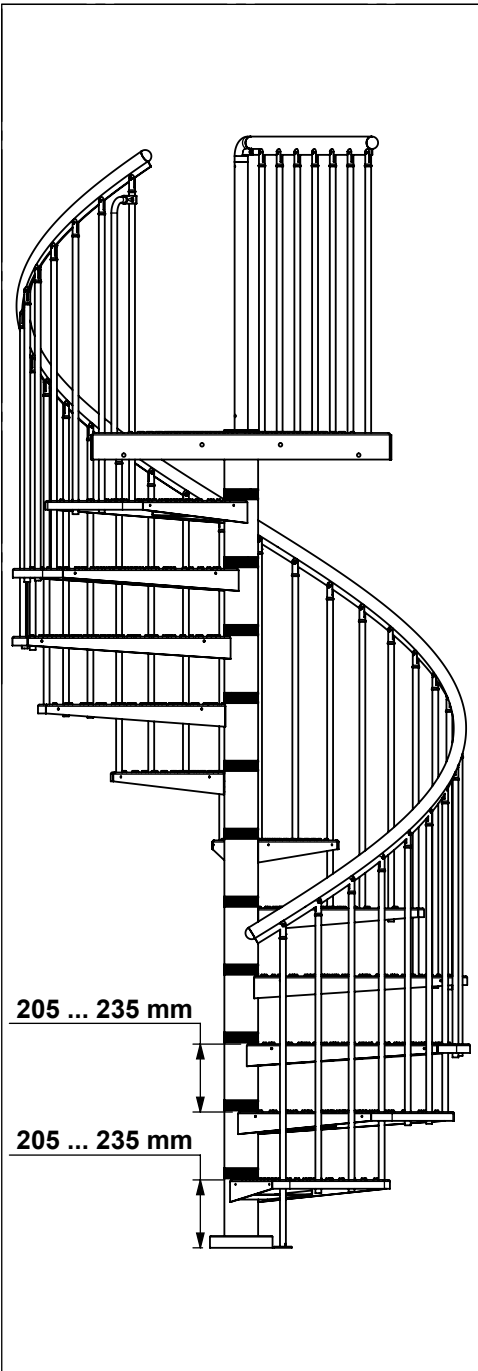


205 mm

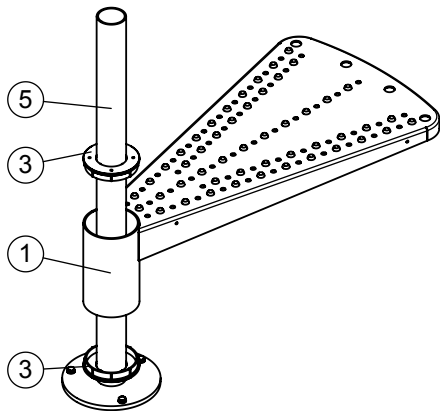


210 mm

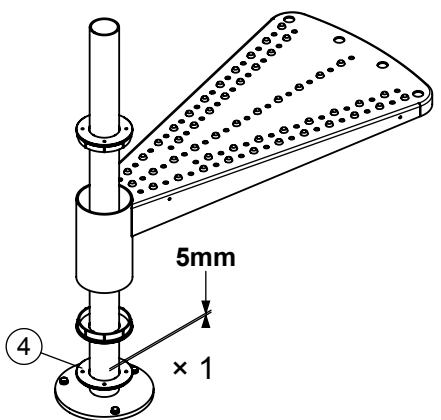


215 mm

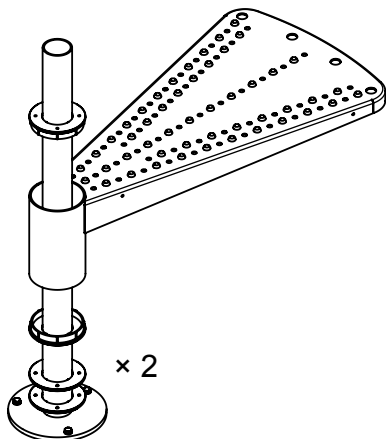


220 mm

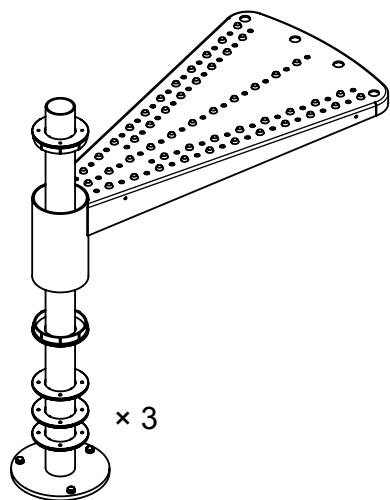


225 mm

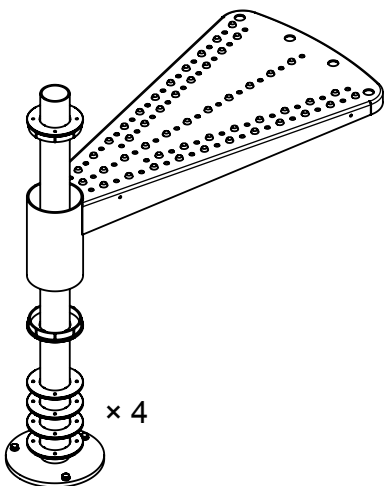

230 mm

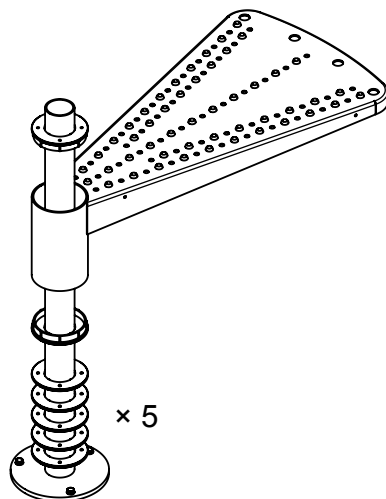

235 mm

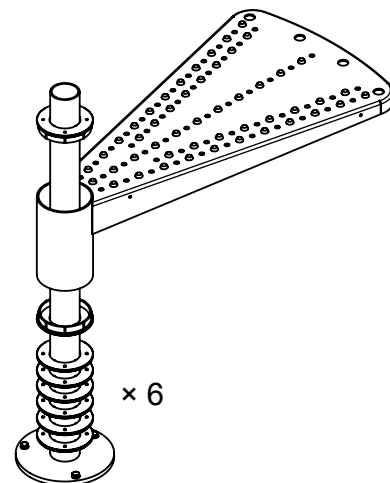


N
0...6 st (pcs)

4

P
+ 1 st (pcs)

P
+ 1 st (pcs)

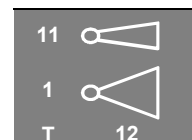

12

T


	5	7	8
2785	5	5	
2790	5	6	
2795	5	7	
2800	5	8	

P

N × T

+ 6 st (pcs)

5 st (pcs) × 12
= 60 st (pcs)


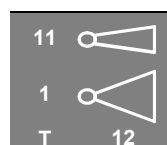


	5	7	8
2785	5	5	
2790	5	6	
2795	5	7	
2800	5	8	

2790 mm

H

[illegible]

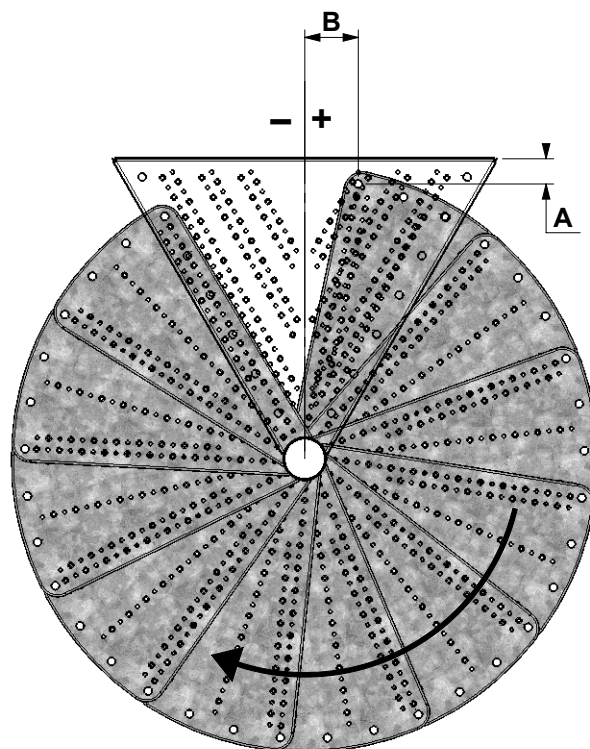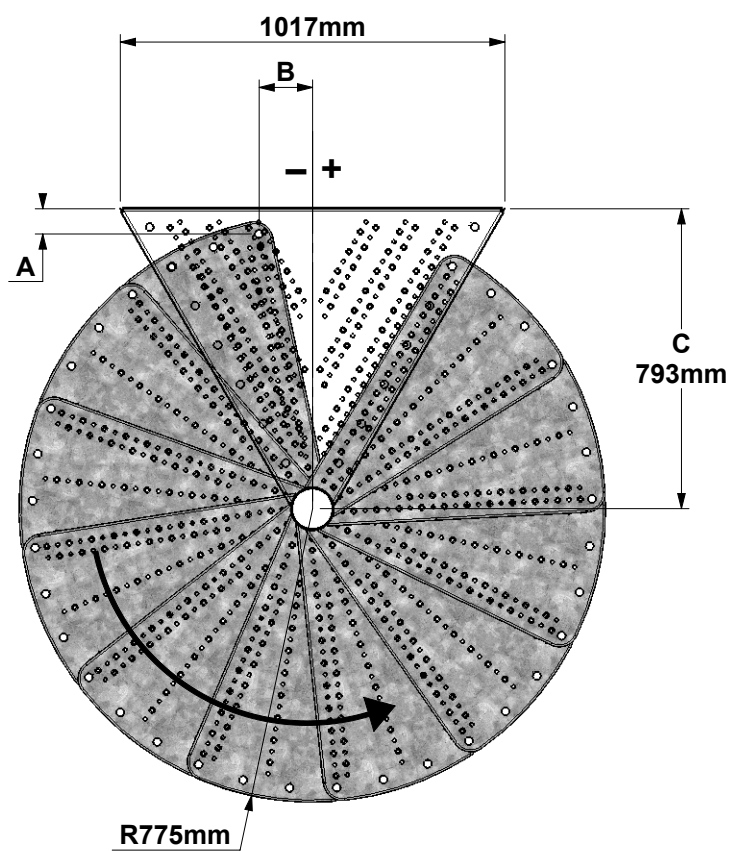

Ø 155 cm		
	A	B
	mm	mm
11	65	-141
12	87	228
13	286	541
14	612	718
15	982	715
16	1305	532

